Bonneagar Iompair Éireann
Transport Infrastructure Ireland

TII Publications

GE PE DN CC OP AM RE

Transport Infrastructure Ireland Carbon Tool for Road, Greenway and Light Rail Projects: User Guidance Document

GE-ENV-01106
September 2025

Withdrawn

CARBON TOOL
Transport Infrastructure Ireland

GE General

Technical

About TII

Transport Infrastructure Ireland (TII) is responsible for managing and improving the country's national road and light rail networks.

About TII Publications

TII maintains an online suite of technical publications, which is managed through the TII Publications website. The contents of TII Publications is clearly split into 'Standards' and 'Technical' documentation. All documentation for implementation on TII schemes is collectively referred to as TII Publications (Standards), and all other documentation within the system is collectively referred to as TII Publications (Technical).

Document Attributes

Each document within TII Publications has a range of attributes associated with it, which allows for efficient access and retrieval of the document from the website. These attributes are also contained on the inside cover of each current document, for reference.

TII Publication Title	*Transport Infrastructure Ireland Carbon Tool for Road, Greenway and Light Rail Projects: User Guidance Document*
TII Publication Number	*GE-ENV-01106*

Activity	*General (GE)*		**Document Set**	*Technical*
Stream	*Environment (ENV)*		**Publication Date**	*September 2025*
Document Number	*01106*		**Historical Reference**	**N/A**

Withdrawn

TII Publications Website

This document is part of the TII publications system all of which is available free of charge at https://publications.tii.ie/. For more information on the TII Publications system or to access further TII Publications documentation, please refer to the TII Publications website.

TII Authorisation and Contact Details

This document has been authorised by the Director of Professional Services, Transport Infrastructure Ireland. For any further guidance on the TII Publications system, please contact the following:

Contact: Standards and Research Section, Transport Infrastructure Ireland
Postal Address: Parkgate Business Centre, Parkgate Street, Dublin 8, D08 DK10
Telephone: +353 1 646 3600
Email: infoPUBS@tii.ie

TII Publications

Activity:	General (GE)
Stream:	Environment (ENV)
TII Publication Title:	Transport Infrastructure Ireland Carbon Tool for Road, Greenway and Light Rail Projects: User Guidance Document
TII Publication Number:	GE-ENV-01106
Publication Date:	September 2025
Set:	Technical

Withdrawn

Contents

1. Introduction 1

2. Background and Rationale 2

3. Carbon Tool - Infrastructure Scenario Process 9

Appendix A: 47

Emission Factors Used in the Carbon Tool 47

Updates to TII Publications resulting in changes to

Transport Infrastructure Ireland Carbon Tool for Road, Greenway and Light Rail Projects: User Guidance Document GE-ENV-01106

Date: September 2025

Page No:

Section No:

Amendment Details:

Since the previous iteration of this guidance, the tool has undergone several key changes, as outlined below:

- **Emission factors** updated to the Inventory of Carbon and Energy (ICE) V4.0 database[1,2] where appropriate.
- **Enhanced user flexibility** with more efficient options to add (manually or via upload), edit and delete data inputs (sections 3.1.2, 3.1.3, 3.1.4).
- **Extra features within the Embodied Carbon tab** which include custom maintenance values, pop-up warning prompts and a new Material Groups Comparison page (section 3.3.4).
- Aligning outputs to **Publicly Available Specification (PAS) 2080 modules.**

These changes aim to enhance functionality, improve user experience, and support efforts to drive carbon reductions aligning with PAS 2080 and TII's project phases.

Withdrawn

[1] Circular Ecology, 2024. ICE Database Advanced V4.0 – Dec 2024. Available at: https://circularecology.com/embodied-carbon-footprint-database.html

[2] At the time of writing, ICE Database V4.1 was in development, with updated emissions factors expected for bitumen, asphalt, and GGBS to reflect the latest industry data. The tool will be updated to reflect these new values following their publication.

Contents Table

1. Introduction 1

2. Background and Rationale 2
2.1 Carbon Tool Development Process 2
2.2 Overview 3
2.3 Longevity 4
2.4 Carbon Tool Introduction 4

3. Carbon Tool - Infrastructure Scenario Process 9
3.1 Using the Tool 9
3.2 Starting a New Entry 13
3.3 Entering Project Data 15
3.4 Entering Carbon Saving Opportunities 32
3.5 Summary Page: Extracting Results 33
3.6 Worked Example for each Stage of the Carbon Tool 34

Appendix A: 47
Emission Factors Used in the Carbon Tool 47

Withdrawn

1. Introduction

The purpose of this document is to provide guidance on the use of the Transport Infrastructure Ireland (TII) Carbon Tool for assessing lifecycle carbon emissions for national road, greenway, and light rail infrastructure projects in Ireland.

This document will also provide users of the TII Carbon Tool with additional background information on the development, format, and content use of the TII Carbon Tool. The document is presented in two parts, as follows:

- **Part 1:** TII Carbon Tool background, including the development process and purpose, boundaries, assumptions, layout, and functionality.
- **Part 2:** A step-by-step run through of each of the TII Carbon Tool's stages to ensure an understanding of the alignment with the engineering approach. To facilitate understanding, this section is best read with the Tool open. This section also includes a case study showing a worked example of the use of the Tool and describes the level of detail expected for each project phase.

The TII Carbon Tool contains embedded guidance aimed specifically at users of the Tool. This approach encourages ease of use and prevents the user from having to refer to multiple documents during completion.

Please note that in order to get access to the Carbon Tool, prospective users should email climatetools@tii.ie to be set up as an authorised user on the TII Web Application Portal.

Withdrawn

2. Background and Rationale

The primary purpose of the TII Carbon Tool is to assist TII and its contractors in complying with the greenhouse gas (GHG) reporting requirements as per the revised Environmental Impact Assessment (EIA) Directive 2014/52/EU[3], hereafter referred to as the EIA Directive.

Where an EIA is not required, for example where the project may not be of a class or scale as to require an EIA (minor road improvement), an individual standalone assessment of GHG carbon footprint may still be required, for which the TII Carbon Tool should be used.

The TII Carbon Tool (hereafter referred to as 'Tool') is designed to be used primarily by climate practitioners, and secondarily for project designers, engineers, and lead contractors as part of the early design and planning process for new road, greenway, and light rail projects. The Tool is aligned to integrate with the existing planning and design cycle. The outputs from the Tool will allow TII and its contractors to compare and evaluate the lifecycle carbon impacts of multiple design options for any given road, greenway, or light rail project.

Further information on carbon footprinting for TII projects can be found in:

- TII Climate Guidance for National Roads, Light Rail, and Rural Cycleways (Offline & Greenways) – Overarching Technical Document (OTD) PE-ENV-01104-01[4] which provides guidance on best practice methodology and processes for climate assessment for road projects, light railway, and Rural Cycleways (Active Travel and Greenway projects).
- TII Climate Assessment of Proposed National Roads Projects - Standard (SD) PE-ENV-01105 which outlines the standards required for conducting and reporting climate assessment for national road projects for Project Phases 0-4.

2.1 Carbon Tool Development Process

There are already several tools in existence worldwide for quantifying GHG emissions associated with the design, build, and operation of road and rail projects.

Before developing this Tool, a review of 12 existing infrastructure-relevant carbon foot printing tools was undertaken to build an understanding of existing tools, approaches, and other information sources. The review of these existing tools found that none were sufficiently specific enough to meet the requirements of TII, either in their scope and boundary of reporting, or for use in Ireland. However, certain aspects of relevant 'good practice' were identified in several of the tools reviewed, and these have been applied during the Tool's design and development. This Tool is designed to provide the specificity required for use in Ireland.

Withdrawn

[3] The European Parliament and the Council of the European Union. (2011). EIA Directive 2014/52/EU amending Directive 2011/92/EU on the assessment of the effects of certain public and private projects on the environment

[4] Transport Infrastructure Ireland (TII) Climate Guidance for National Roads, Light Rail, and Rural Cycleways (Offline & Greenways) – Overarching Technical Document (OTD) PE-ENV-01104-01. Available at: https://cdn.tii.ie/publications/PE-ENV-01104-01.pdf

2.2 Overview

The Tool is designed to assist TII and its contractors to meet the requirement for a lifecycle carbon emissions footprint as part of the revised EIA Directive. The precise requirements of a carbon footprint are not outlined in the EIA Directive; therefore, this Tool adheres to best practice guidelines in relation to carbon foot printing within the industry, whilst also meeting the requirements of TII.

It is customised for road, greenway and light rail projects in Ireland and will help to facilitate further, the integration of environmental issues into transport infrastructure planning, construction, operation, and end-of-life.

It is designed to be used by contractors (project designers, consultants or lead contractors) as part of activities leading up to the design and completion of new road, greenway, and light rail projects.

The Tool is designed to integrate seamlessly with the current planning and design cycle for road, greenway, and light rail projects. The outputs from the Tool give TII and its contractors the information needed to understand, compare, evaluate, and reduce the lifecycle carbon impacts of multiple design options for any given road, greenway, or light rail project. It uses project activity data combined with embedded emission factors and assumptions to calculate a carbon footprint for a proposed road, greenway, or light rail project. The Tool allows for reporting of a project, across TII's project phases. Carbon emissions are reported in line with the project lifecycle stages outlined in Publicly Available Specification (PAS) 2080:2023 Carbon Management in Infrastructure[5]), best practice guidance for measuring and reporting greenhouse gas emissions for infrastructure projects.

The scope of the Tool is designed to fulfil the following criteria:

- **Include road, greenway, and light rail projects:** Includes functionality to enable the assessment of road, greenway, and light rail projects within one tool.
- **Lifecycle carbon emission calculation:** Enables carbon data to be presented for the different lifecycle stages in alignment with those in PAS 2080.
- **Align with TII project phases:** Useable at the different project phases, in road, greenway and light rail projects, from initial outline design and option selection through to detailed design and final implementation.
- **Model multiple projects designs and a business-as-usual baseline:** Enables modelling of ten different project designs and a baseline scenario, which reflects business as usual[6] assuming that the project is not built.
- **Flexibility in inputs and outputs:** Allows for different levels of assessment to be carried out, aligning with the project phases in TII road, greenway, and light rail projects. It is also designed so that new emerging carbon emission factors data (from Environmental Product Declarations (EPDs) etc.) can be added.
- **Capture carbon mitigation measures:** Ability to capture where carbon mitigation measures are taken within each design and in later project phases capture potential carbon savings attributed to each of the measures.
- **Exportable outputs:** Provides a range of output types and outputs that can be exported.

Withdrawn

[5] Publicly Available Specification (PAS) 2080:2023 Carbon Management in Infrastructure, BSI, 2023
[6] Business as usual represents the existing GHG emissions from within the boundary of the proposed study area, this may include emissions from existing structures (e.g. energy consumption from a building which is scheduled for refurbishment, demolition, or replacement) and existing infrastructure (e.g. current operational and use emissions of the affected road network being assessed).

2.3 Longevity

The Tool is designed to allow users to add emission factors for construction materials, and when more country-specific data becomes available or from EPDs. The Emission Factor list can be viewed within the Tool (Emissions Factors page), and the background dataset will be updated regularly to account for updates to the source datasets.

It is recommended that the Carbon Tool undergoes an annual update during which all emission factors sources are checked for updates including new data that is more specific to Ireland.

2.4 Carbon Tool Introduction

Initially this Tool was developed and launched in 2018 using Microsoft Excel. From 2022, the Tool has been available as an online version and operates as a web-based application using R software. The Tool has been designed to be used at the defined project phases, for road, greenway and light rail that are traditionally adhered to during TII projects (Figures 3.1, 3.2, and 3.3).

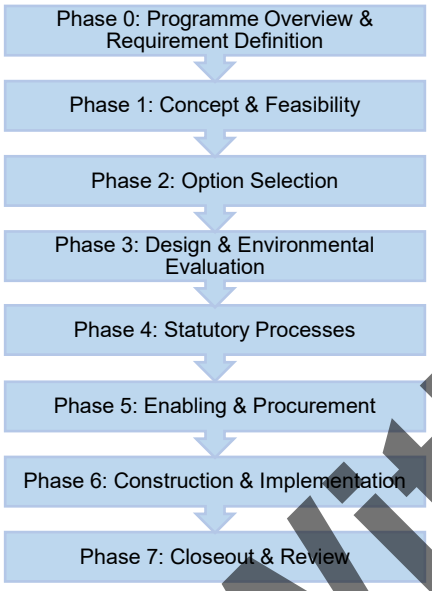


Figure 2.1 Road Project Phases (from TII Project Management Guidelines, 2023, PE-PMG-02041)

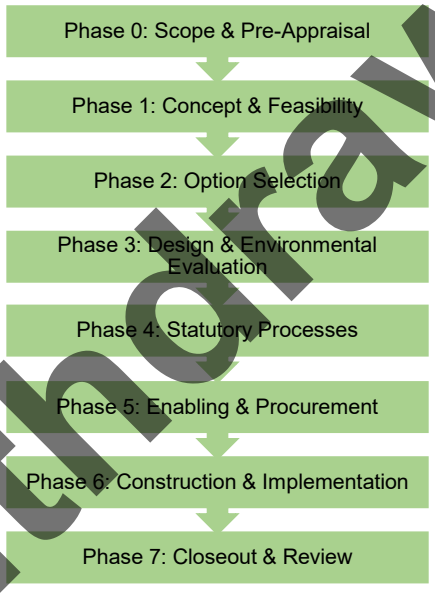


Figure 2.2 Greenway Project Phases (from TII Project Management Guidelines, 2023, PE-PMG-02041

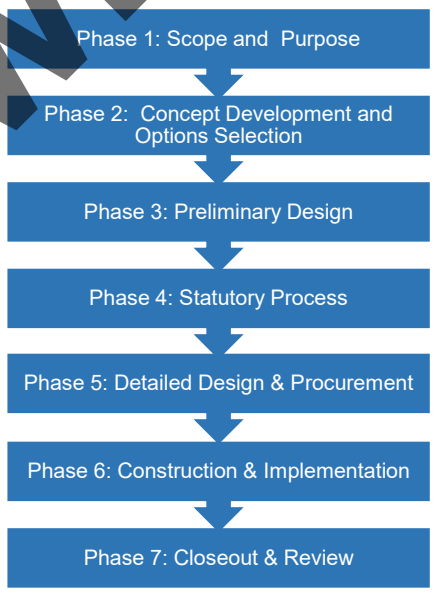


Figure 2.3 Light Rail Project Phases (from National Transport Authority (NTA) Project Approval Guidelines, 2020)

Withdrawn

Table 3.1 displays the level of completion required in the Tool for each project phase. Data on key elements (i.e. concrete, steel, aggregates), should be entered into the Tool at the earliest project phase possible, with assumptions and limitations noted where relevant to explain data availability and status. For more information on data availability at each project phase, please see OTD PE-ENV-01104-01[4]. The Tool provides a template to complete best practice information, but it cannot define the data needs for every project. The individual project boundaries will be defined as part of the EIA scope, and the information scoped in and out will depend upon the project in question.

New available data for the project should be populated at each phase of a project, and results from the previous project phase should be copied into the new Tool for comparison purposes. Once completed, results should be saved and downloaded as a record of the performance of the project at the particular phase.

Table 3.1 Summary of data expected for the assessment of GHG emissions and level of completion of the Tool for each phase.

<table>
<tr><th rowspan="2">TII Project Phase – Road & Greenway Projects</th><th rowspan="2">NTA Project Phase – Light Rail Projects</th><th colspan="9">Data input pages within the Tool that should be completed for each Project Phase</th></tr>
<tr><th>Project Details</th><th>Scoping</th><th>Baseline Data</th><th>High Level Design</th><th>Pre-construction</th><th>Embodied Carbon</th><th>Construction</th><th>Use</th><th>End of Life</th></tr>
<tr><td>Phase 0: Programme Overview & Requirement Definition / Scope & Pre-Appraisal</td><td>Phase 1: Scope & Purpose</td><td>Qualitative details available</td><td colspan="8">No quantitative data likely to be available for assessment of GHG emissions.</td></tr>
<tr><td>Phase 1: Project Concept & Feasibility</td><td rowspan="2">Phase 2: Concept Development & Options Selection</td><td>Qualitative details available</td><td colspan="8">No data likely to be available at this project phase and no statutory requirement for analysis.</td></tr>
<tr><td>Phase 2: Option Selection</td><td colspan="5">Qualitative and estimated quantitative details available</td><td colspan="4">Limited quantitative data might be available e.g. a partial Bill of Quantities, road user emissions (road projects), traction energy demand (light rail projects).</td></tr>
<tr><td>Phase 3: Design & Environmental Evaluation</td><td>Phase 3: Preliminary Design</td><td colspan="9">Quantitative data should be available for quantitative analysis and should be entered into the Tool for all areas that have been scoped into the EIA. Details of identified carbon savings opportunities should be completed.</td></tr>
<tr><td>Phase 4: Statutory Processes</td><td>Phase 4: Statutory Processes</td><td colspan="9">The assessments undertaken in previous phases will form the Climate Chapter of EIA Report for submission of the statutory consent documentation for the project as per the scoping report.</td></tr>
<tr><td>Phase 5: Enabling & Procurement</td><td>Phase 5: Detailed Design & Procurement</td><td colspan="9">Revised, updated, and refined information should be entered into the Tool for all areas that have been scoped into the EIA. This should include all design changes. Details of identified carbon savings opportunities should be completed.</td></tr>
<tr><td>Phase 6: Construction & Implementation</td><td>Phase 6: Construction & Implementation</td><td colspan="9">Actual and detailed data from the project should be entered into the Tool for all areas that were scoped into the EIA (this is to allow for changes during the project to be tracked according to the same project boundaries). Details of implemented carbon savings opportunities should be completed.</td></tr>
<tr><td>Phase 7: Closeout & Review</td><td>Phase 7: Closeout & Review</td><td colspan="9">Final data from the project should be entered into the Tool for all areas that were scoped into the EIA. Details of final carbon savings achieved should be completed within each project phase, where information is available</td></tr>
</table>

Withdrawn

2.4.1 Boundaries

Reporting boundaries for the Tool should align with those presented in Section 7 of PAS 2080 (Figure 1.4), which provides good practice for lifecycle carbon quantification in infrastructure projects. PAS 2080 was published by the British Standards Institution (BSI), the Construction Leadership Council and the Green Construction Board in 2016. It specifies requirements and provides guidance for the management of carbon in infrastructure (transport, energy, water, waste, and communications), both in the provision of new infrastructure assets and the refurbishment of existing infrastructure.

PAS 2080 has been developed to:

- Provide a specification for infrastructure carbon management which is compatible with international and sectoral norms, standards, and guidance.
- Bring consistency to and encourage uptake of the practice of carbon management.
- Help the infrastructure value chain to become more efficient.
- Improve the accuracy, transparency, consistency, relevance, and completeness of GHG emissions quantification.
- Support evidence-based decision making and identify opportunities for carbon reduction.

PAS 2080 guidance breaks down the project lifecycle into three stages: 1) Before use, 2) Use, and 3) End of life.

Each stage is then broken down further into subsections aligning with that for an EPD. The Tool's alignment with this approach allows for Ireland-specific EPD carbon emission factors data to be integrated into the database once it becomes more readily available.

Withdrawn

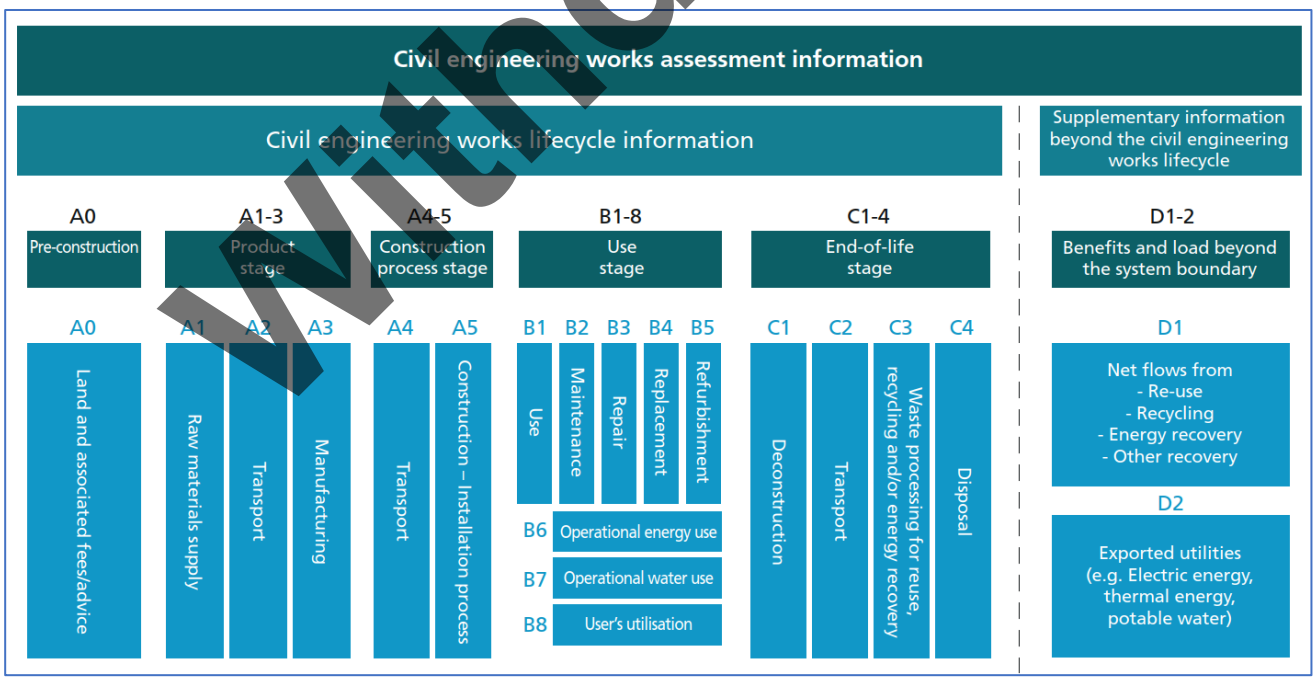


Figure 2.4 Civil engineering assessment lifecycle information from PAS 2080, displaying the Tool reporting boundaries

2.4.2 Compliance with EPDs

The Tool is designed so that carbon emission factors data from Ireland-specific EPDs can be added as and when they become available. For new materials or components, this is achieved through the use of the 'Add New Material' function on the 'Embodied Carbon' data input page.

2.4.3 Carbon Tool Layout and Functionality

The format of the Tool guides the user as to which cells they need to complete by adding new data and when a selection from a drop-down list is required. A schematic representation of the Tool is displayed in Figure 1.5; this includes the corresponding PAS 2080 stages (in parentheses).


Data entry format varies according to the information type being inputted. Data entry can be carried out by using the 'Add' or 'Edit' buttons, which will open a popup box prompting the user to either add data to a new row or edit an existing row, by selecting from the dropdown menus and entering numeric values or text into input fields. Single or multiple rows of data can be deleted by selecting them in the table and using the 'Delete' button. Alternatively, there is the option to download a template Excel file (using the 'Download Template' button) that allows the user to populate the data in Excel and then upload the completed table into the Tool using the 'Upload from Template' button. Further details on data input into the Tool is given in the following sections.

Drop-down lists enable selection of materials, fuels, and transport modes, while volumes and amounts are entered by the user into fields restricted to number format inputs only. Units are auto completed based on drop-down selection and all data inputted needs to be entered in these units to give an accurate result.

2.4.1 Carbon Tool Users and User Competency

The Tool is designed to be completed by personnel involved in the design for each project phase. Depending on the nature of the project, this may be a TII staff member, consultant, designer, or other contractor. Although the Tool undertakes the technical calculations automatically, a certain degree of understanding of carbon foot printing processes will be advantageous to correctly evaluate the outputs; it should be an engineer or scientist with some specialist knowledge. Expert knowledge is not expected as detailed guidance is available.

Withdrawn

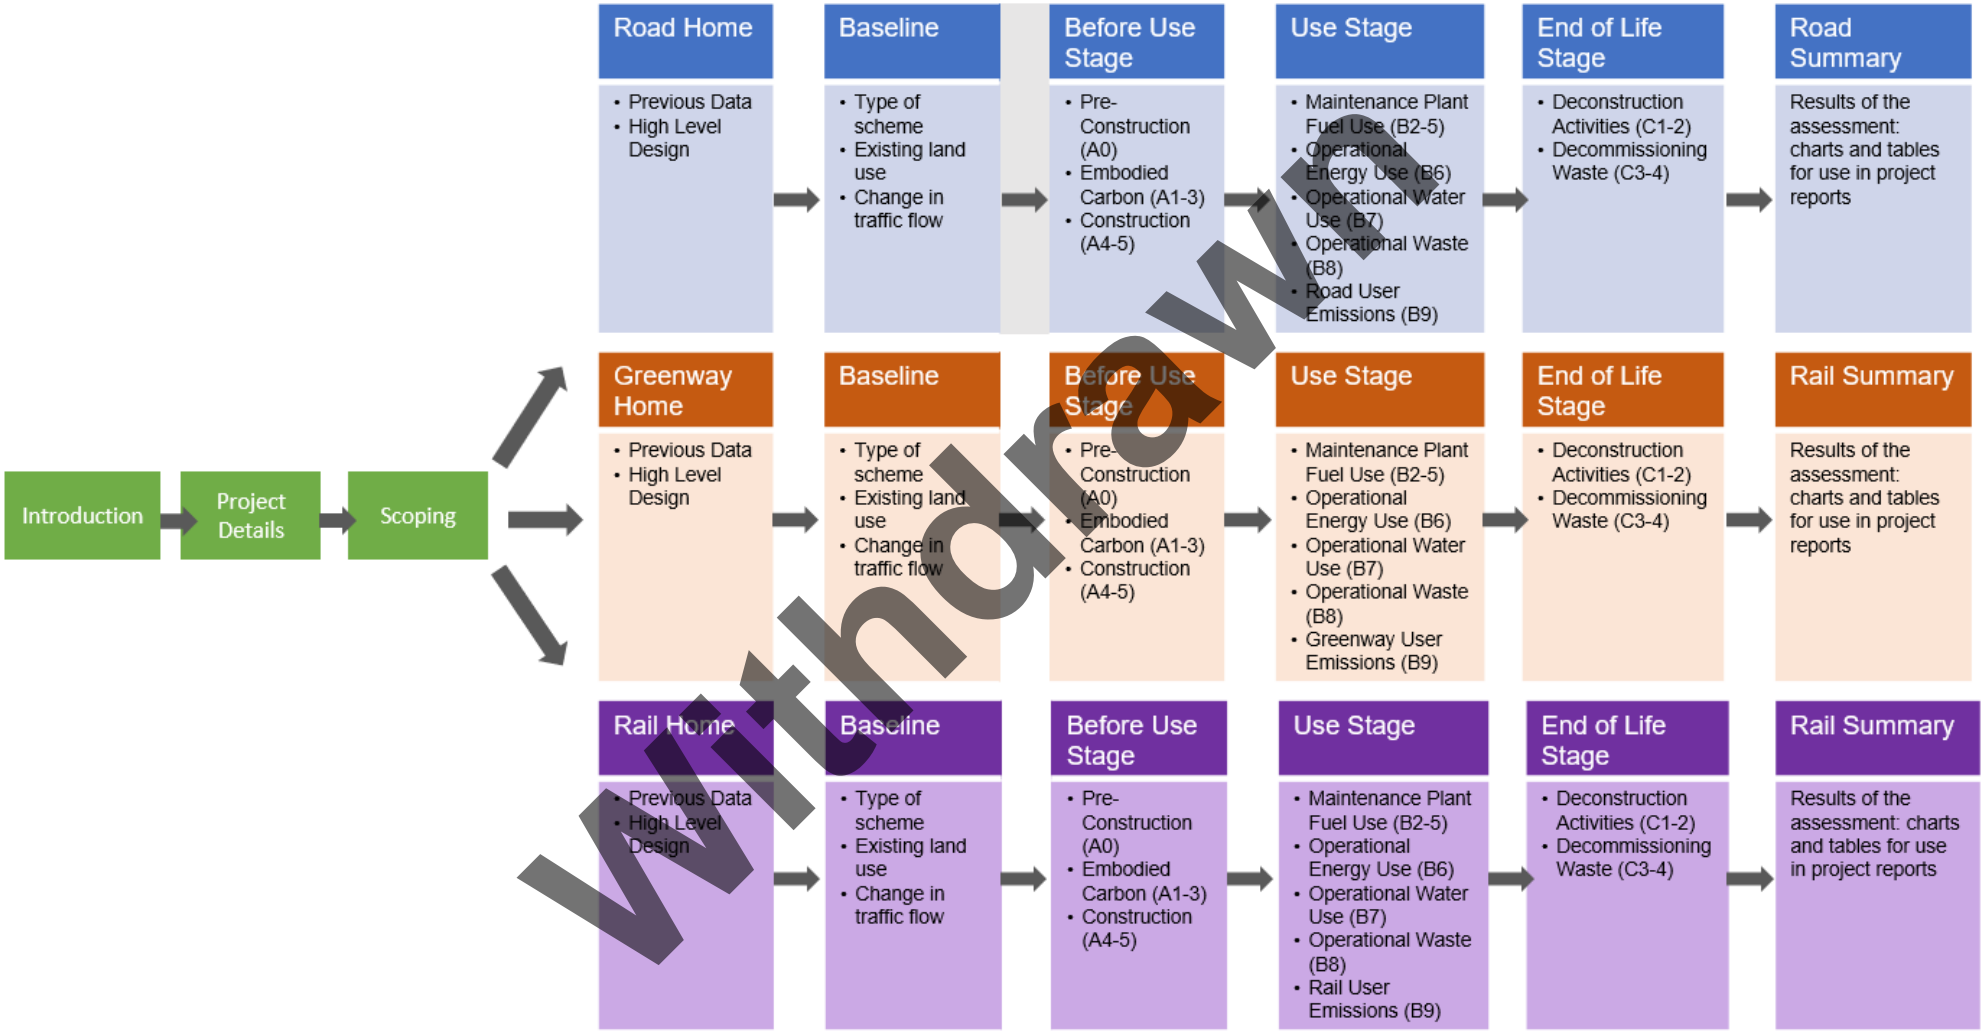

Withdrawn

Figure 2.5 The schematic layout of the TII Carbon Tool. The references in parentheses (0, A1-3, B2-5, etc.) correspond to PAS 2080 footprint elements.

3. Carbon Tool - Infrastructure Scenario Process

3.1 Using the Tool


3.1.1 Navigation

Upon opening the Tool, users will see the 'Introduction' page.



Withdrawn

The sidebar menu can be used to navigate through the Tool. Some data input pages have multiple tabs which can be navigated by clicking on the tab title on the sidebar menu. Once selected the button on the sidebar menu with the title of the page should change colour.

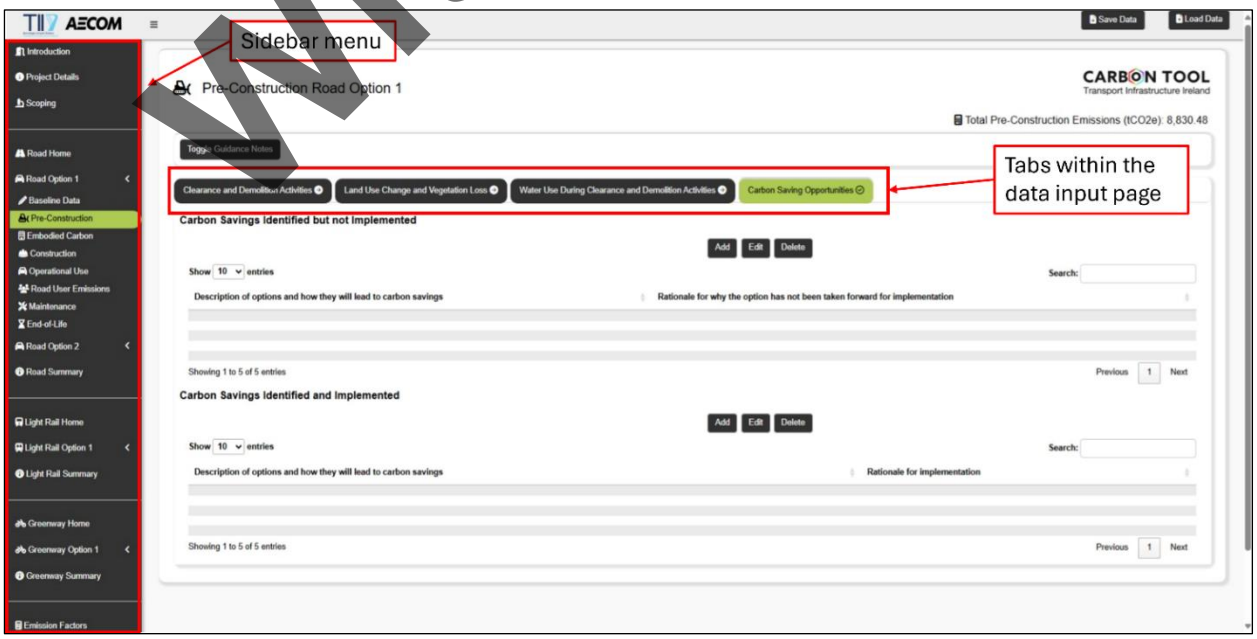


3.1.2 Adding Data

The data entry format is consistent across all stages of the Tool with two options to enter data as detailed below. Users can use both ways interchangeably, noting that either method will append to the existing data in the table rather than replace it. Therefore, users must be mindful of duplicate rows.


- **Using the 'Add' button**



To add new data, users can select the 'Add' button. This will open a pop-up box where relevant information and/or data can be inputted. Volumes and amounts must be entered by the user into the specific cells restricted to number format inputs only. All data inputted needs to be entered in the units specified in the 'Unit' column of the table. Some fields are drop-down menus for selecting predefined options. Once selected, the 'Unit' field will automatically populate based on this selection. Assumptions/notes and other comments should be entered in the field 'Comments'.

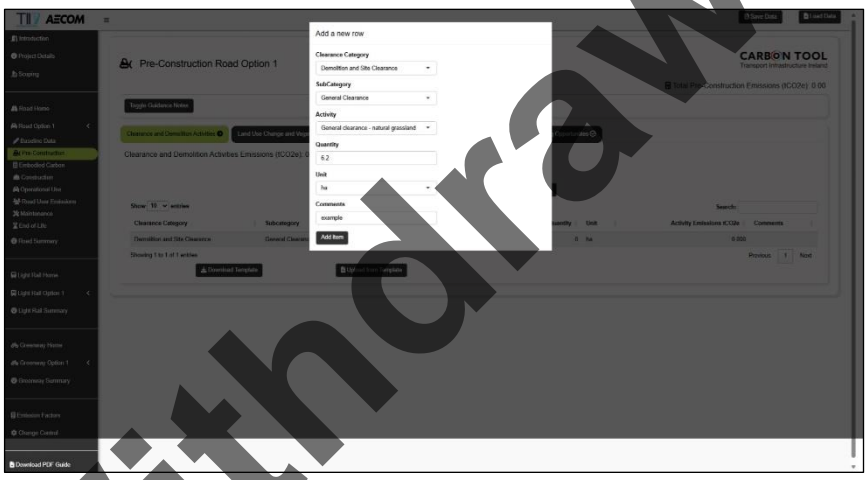

- **Using the template download and upload function**

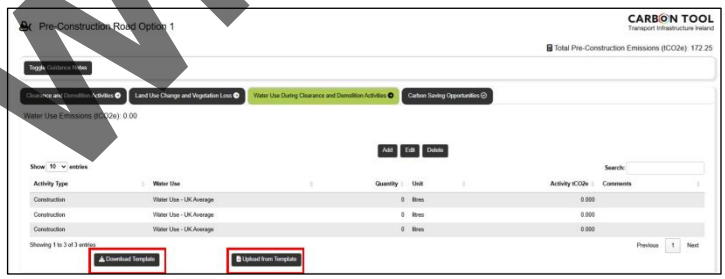

Users can also enter data into the Tool by selecting 'Download Template'. This will download a clean file to the user's desktop, which can be populated outside of the Tool. If there is existing data in the tab that users are adding data to, it will not be included in the downloaded template. Once populated, users can upload the file back into the Tool by selecting the 'Upload from Template' button and then selecting the relevant file. The data should then appear in the table of the relevant tab.


Withdrawn

3.1.3 Editing Data




To modify an existing data entry, users must first select the relevant row they wish to edit; the selected row will be highlighted blue. Click the 'Edit' button and a pop-up window will appear, allowing the user to update the relevant fields for the selected row. After the changes have been made, click 'Confirm' to return to the main table.


Data entries can only be modified one row at a time.

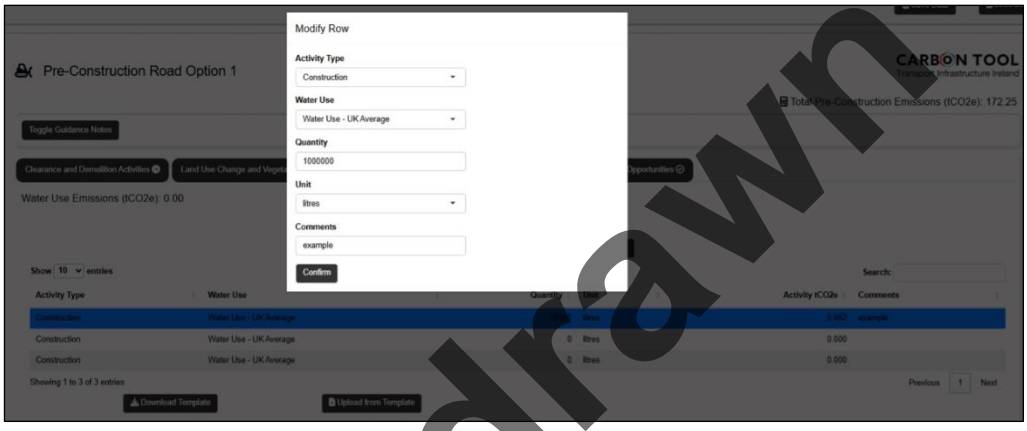

3.1.4 Deleting Data

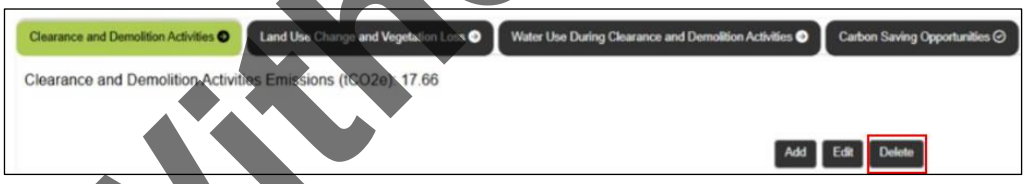

To delete a data entry, users should select the row(s) they wish to delete, followed by the 'Delete' button. The user will then be prompted to confirm if they would like to delete the row(s) or cancel the request. Multiple data entries can be deleted at a time.

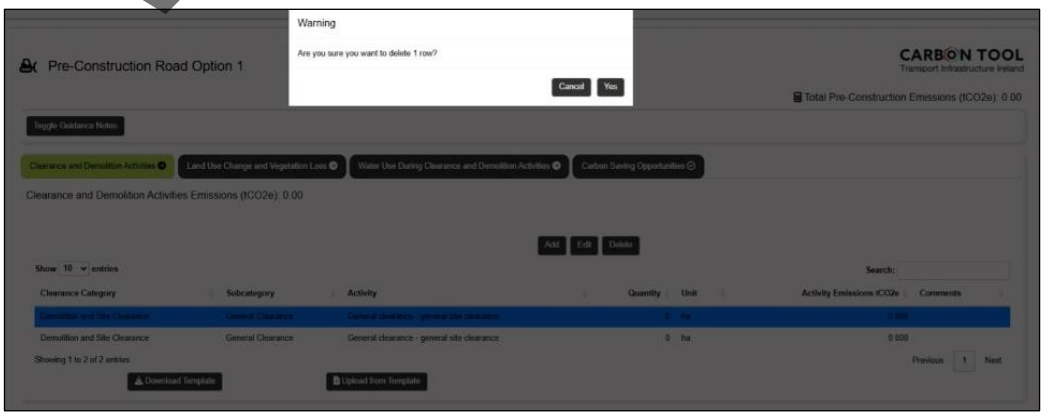


Withdrawn

3.1.5 Saving and Loading Data


The 'Save data' button in the top right corner should be used at regular intervals to ensure progress is saved. This will download a file (with a '.sav' extension) containing all data entered into the tool up to that point to the user's desktop.

Users can load previously entered data for the project by using the button 'Load Data' and selecting the relevant .sav file with the latest saved data for the project. Users must **always save** the data input before closing the Tool, otherwise the data will be lost.

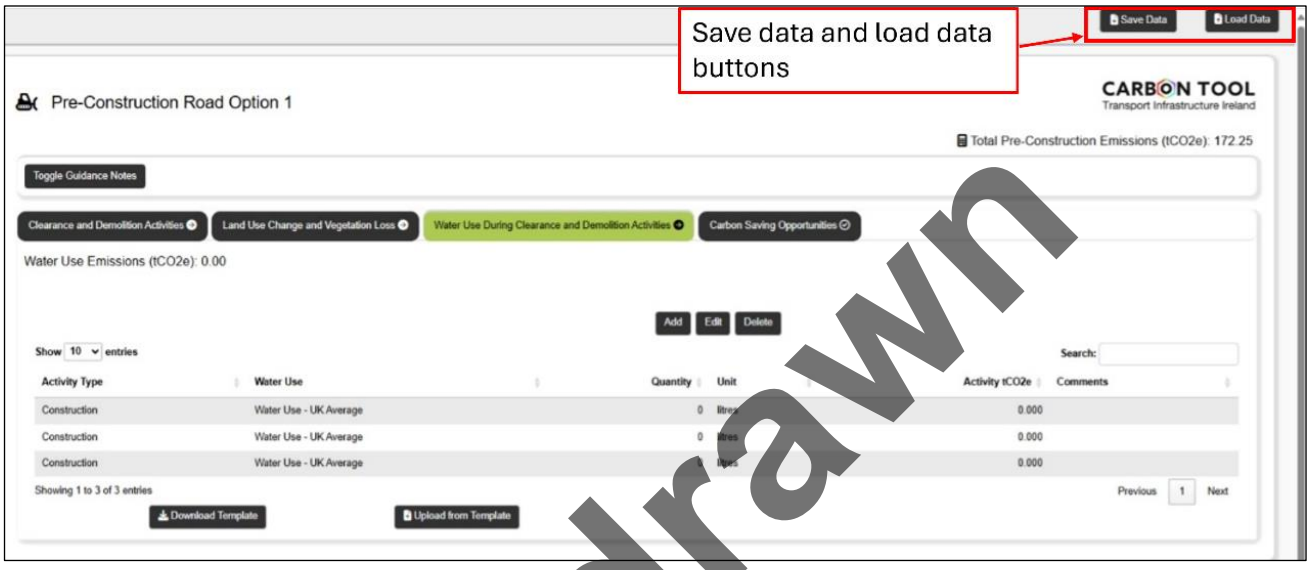

3.1.6 Emissions Factors Database

Users are able to view CO_2 emissions factors for various processes and materials by navigating to the Emission Factors menu item and selecting the desired tab across the top of the page. The table can be filtered and sorted to facilitate searching.

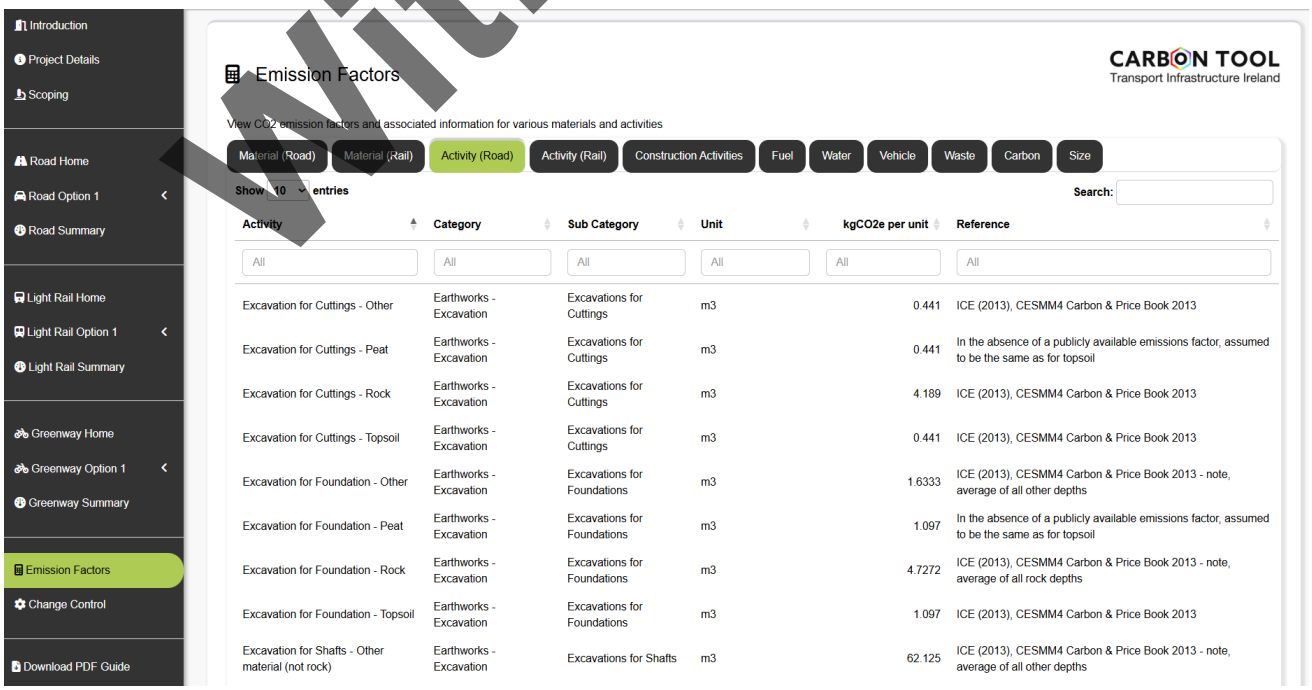

Withdrawn

3.2 Starting a New Entry

Step 1: Enter Project Details

Purpose of this page: To collect details of the project, as listed previously, for completeness and future reference. The project value is used to calculate intensity outputs, while the project design life is used to calculate the emissions associated with the use stage of the project.

Use the side menu bar to navigate to **'Project Details'**. For this section, the user should provide:

a) The project reference number.

b) Project name and description.

c) Project value (in Euro) (mandatory field that is used to calculate intensity outputs).

d) The phase of the project for which the Tool is being run (according to Figure 1.1 or 1.2) (mandatory field that is used for submitting a copy of data from the previous project phases).

e) The project construction period.

f) The project design life (mandatory field that is used to calculate the emissions associated with the use stage of the project)

g) Information about the project design features e.g. length of infrastructure, key assets, and number of interchanges.



Withdrawn

Step 2: Complete Scoping Assessment

Purpose of this page: To allow the user to record which elements are to be included or excluded from the carbon footprint assessment. This is useful for reference as the project progresses, and also for project reporting as it requests that the rationale for inclusions and exclusions are recorded.

Use the side menu bar to navigate to **'Scoping'**.

For this section, the user will need to identify which lifecycle stages are being included and excluded in the assessment.

Using the relevant drop-down boxes, the user should select the number of road, greenway, or light rail options to be assessed. This will create a separate tab in the left side menu, to enter project activity data for each of the options. For example, when the number of Road Options is 3, three separate tabs will be created: Road Option 1, Road Option 2, and Road Option 3.

The ability to enter data for multiple design options facilitates the comparison of emissions for different scenarios. For example, the selection of two options allows the tool to be used to calculate emissions for a scenario where no carbon saving methods are introduced to get the worst-case scenario and compare this against a second scenario that assumes mitigation measures are implemented and carbon savings achieved.

Next, the user should complete the information under each of the lifecycle tabs (Pre-construction stage, Product Stage, Construction Process Stage, Operation and Use Stage and Decommissioning) on the second half of the Scoping page. Under each tab, the drop-downs should be completed to indicate which sources of GHG emissions are included in the scope of the assessment.

A simple one-sentence summary is also recommended in the Justification box where an activity is scoped out, in order to explain why the activity is being scoped out of the carbon assessment being undertaken.

Once a stage, or part of a stage, within the Tool has been scoped out, it should not be included during any project phase; doing so would invalidate any comparisons made between project phases.



Withdrawn

Step 3: Select type of the project

Users should then use either the ‘Road Home’, ‘Greenway Home’ or ‘Light Rail Home’ to proceed to the relevant data entry tabs, depending on the project type.

3.3 Entering Project Data

3.3.1 Road Home / Greenway Home / Light Rail Home

Use the side menu bar to navigate to the **'Road Home' / 'Greenway Home' / 'Light Rail Home'** page, as applicable. The Road Home / Greenway Home / Light Rail Home page features two tabs: **'Previous Data'** and **'High Level Design'.**

Previous Data

Purpose of this page: To record the carbon footprint calculated as part of the previous project phase. This allows for easy comparison of the stages while this project phase is being completed and enables continuity or data transfer between project phases, especially if different contractors are being used.

If working on Project Phase 2 onwards, users should export the Emissions Breakdown Summary output from the previous tool for a previous project phase (found in the Summary tab of the Tool[7]), copy into a downloaded template of the table, and then upload this template using the 'Upload Template' button.

High Level Design

Purpose of this page: The High-Level Design stage collates information on the design of the infrastructure, including the length of the route, the number and length of bridges and tunnels and the number of interchanges. There is also a space to describe the route corridor and any loss of previously untouched land that might occur. This provides a descriptive summary of the project for reporting purposes, but the information added in this section is not currently used in the Tool's calculations.

Once on the **'High Level Design'** page, users need to enter high-level details on the proposed route corridor, including an estimate of the route length, number, and length of bridges, roads, and interchanges, as well as a summary of the loss of land.



Option	Names	Description	Distance (km)	Number of Bridges	Total length of Bridges (m)	Number of Tunnels	Total length of Tunnels (m)	Number of Interchanges	Loss of previously untouched land (description)
Option 1	Option A		5.00	0.00	0.00	0.00	0.00	2.00	
Option 2	Option B		7.00	1.00	1,200.00	0.00	0.00	3.00	
Option 3			0.00	0.00	0.00	0.00	0.00	0.00	
Option 4			0.00	0.00	0.00	0.00	0.00	0.00	
Option 5			0.00	0.00	0.00	0.00	0.00	0.00	
Option 6			0.00	0.00	0.00	0.00	0.00	0.00	
Option 7			0.00	0.00	0.00	0.00	0.00	0.00	
Option 8			0.00	0.00	0.00	0.00	0.00	0.00	
Option 9			0.00	0.00	0.00	0.00	0.00	0.00	
Option 10			0.00	0.00	0.00	0.00	0.00	0.00	

Withdrawn

[7] If the previous tool used for carbon assessment was MC Excel based tool, summary outputs can be found on the detailed outputs page.

Note that the user should always complete the 'Names' column, as the text entered here for each option will be used throughout the Tool on each of the option pages. It will be displayed in the top ribbon underneath the option number for ease of identification.

3.3.2 Baseline Data

Purpose of this page: The project baseline represents the existing conditions. This includes existing land use and traffic flow (if applicable). The information added here is not currently used in the Tool's calculations.

Use the side menu bar to navigate to the **'Baseline Data'** page for the relevant Option.

Users need to select the type of project. If the proposed project is a Completely New Infrastructure, then users will need to enter data on whether the project is being built on untouched land, land use for another purpose or combination of developed and undeveloped land.

Users are also asked to enter the current estimated annual average daily traffic (AADT) for the Do-Minimum scenario (without the proposed project), and an estimate for how much (%) this is likely to increase or decrease as a result of the proposed project.



Withdrawn

3.3.3 Pre-Construction


Purpose of this page: The Before Use - Pre-Construction stage considers activities that will take place at the pre-construction project phase, specifically clearance and demolition works. Data entered here is collated and used in the final outputs. Carbon-saving opportunities (both proposed and implemented) should be entered in the tables provided for each activity detailed, as applicable.

Data can be entered using the template download/upload function and / or the 'add'/edit' buttons


Use the side menu bar to navigate to **'Pre-Construction'**.

There are four tabs where user input is required: 'Clearance and Demolition Activities', 'Land Use Change and Vegetation Loss', 'Water Use During Clearance and Demolition Activities' and 'Carbon Saving Opportunities':

a) **Clearance and Demolition Activities**: Select clearance activities and current type of land to be cleared. Then enter size of the area of land to be cleared (there must be a positive value in the units provided, in the unit column of the table). The calculation automatically accounts for the energy requirements to undertake these activities. When the land clearance type is unknown, the 'General Clearance - general site clearance' factor should be selected, which represents an average factor considering a combination of different clearance types.

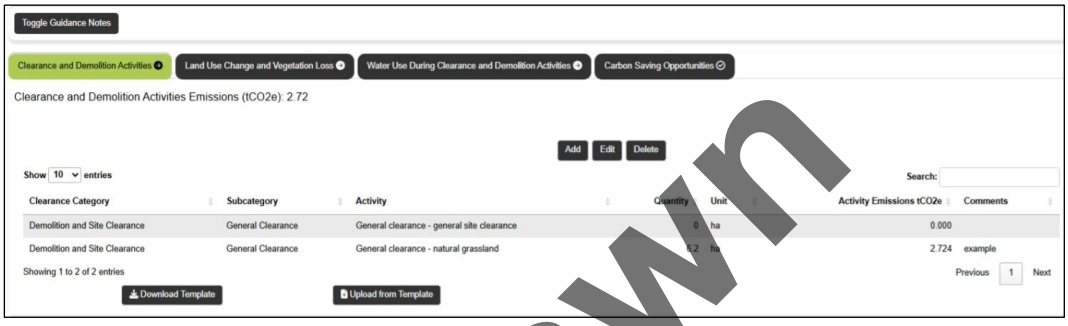

b) **Land Use Change and Vegetation Loss:** Select the type of vegetation and planting that will be added as part of the project's development and provide quantity for each type of vegetation. The Tool automatically applies a negative value to the calculated emissions total to account for the carbon savings realised by planting.

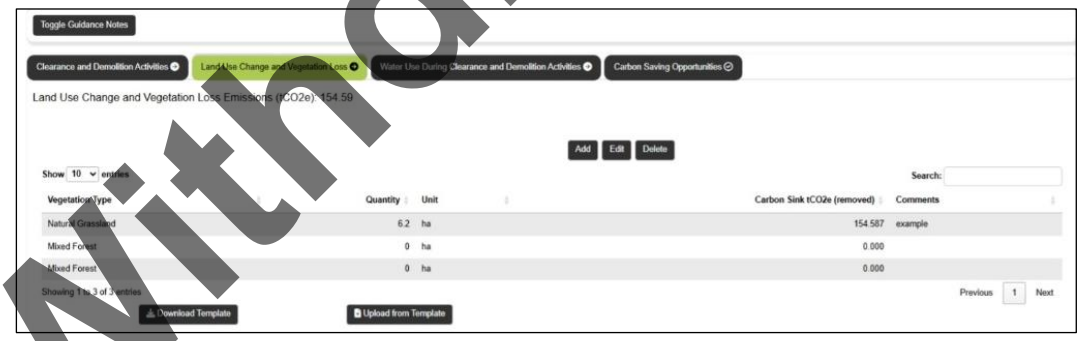


c) **Water Use During Clearance and Demolition Activities**: Enter the volume of water, in litres, to be used during clearance and demolition activities.



Withdrawn

d) **Carbon-saving opportunities**: Pre-construction carbon-saving activities can be entered here. For a summary of entering carbon-saving information, refer to section 3.4.

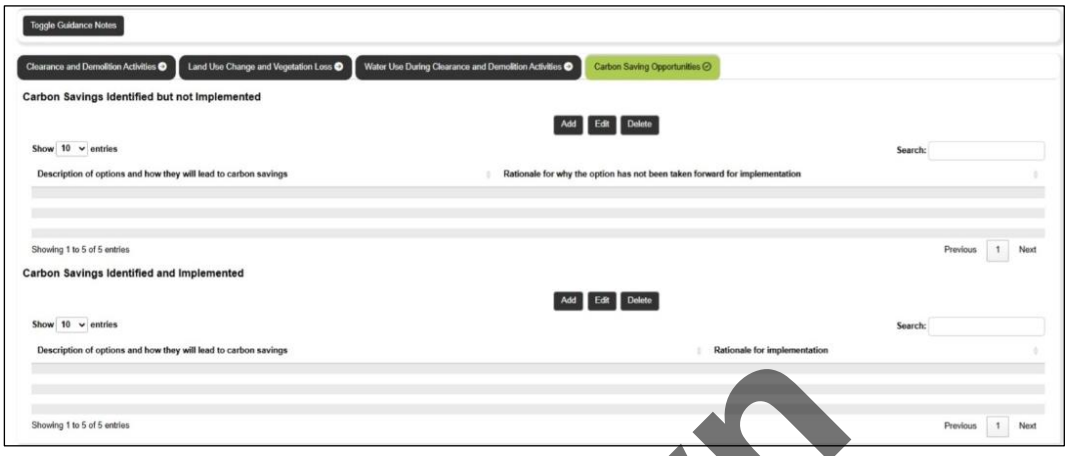

3.3.4 Embodied Carbon

Purpose of this page: The Embodied Carbon stage considers the product stage, including materials that will be used during the construction process and details of material transportation. The data entered here is used to calculate the outputs and is collated, to give the embodied carbon for materials used in the construction of the project.

Data can be entered using the template download/upload function and / or the 'add'/edit' buttons


Use the side menu bar to navigate to the **'Embodied Carbon'** to enter details on the materials that will be used. The data to be entered here is as follows:

a) For TII project phases 0 and 2 (refer to Table 3.1 for details), while it is noted that information is not usually available at this stage, best estimates of the main construction materials to be used (e.g., concrete, steel, aggregates) should be entered when possible, with estimated transportation of materials data being recorded if available.


b) From Phase 3 onwards, as much detail as is available should be entered, with phases 6 and 7 completions detailing full material lists.

Withdrawn

c) Select the category, subcategory and type of the materials used during the construction of the project and enter the quantity of each selected material. A standard industry emission factor will be applied to the selected material from the embedded emission factors database.

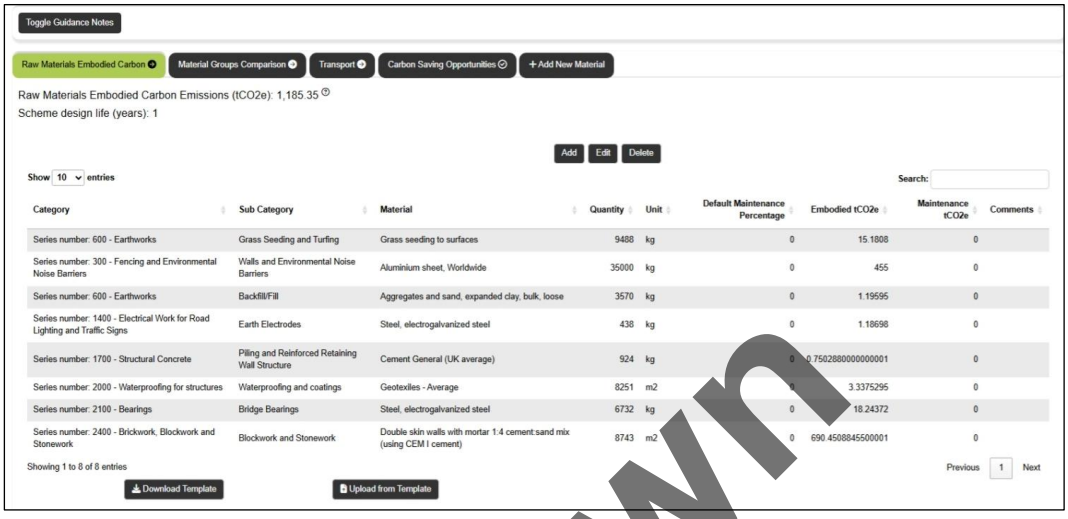


d) Should users wish to enter a bespoke factor (e.g. carbon data from an EPD) they should click on **'Add New Material'**. Where users are using new materials in an assessment, TII should be notified. The user must select the category and sub-category of material to be added, and then type in the material name, $kgCO_2e$ value per unit and units along with the source of this emission factor. Once added into the form the user must use the 'Add Material' button to submit entry before returning to the 'Raw Materials Embodied Carbon' page. The details need to be accurately recorded and will be stored in the Tool to allow TII to check the factor and sources used. When returned to the table, the user can select the newly added material using the drop-down lists by selecting the category and sub-category entered on the form; the new material will be available for selection in the materials column.

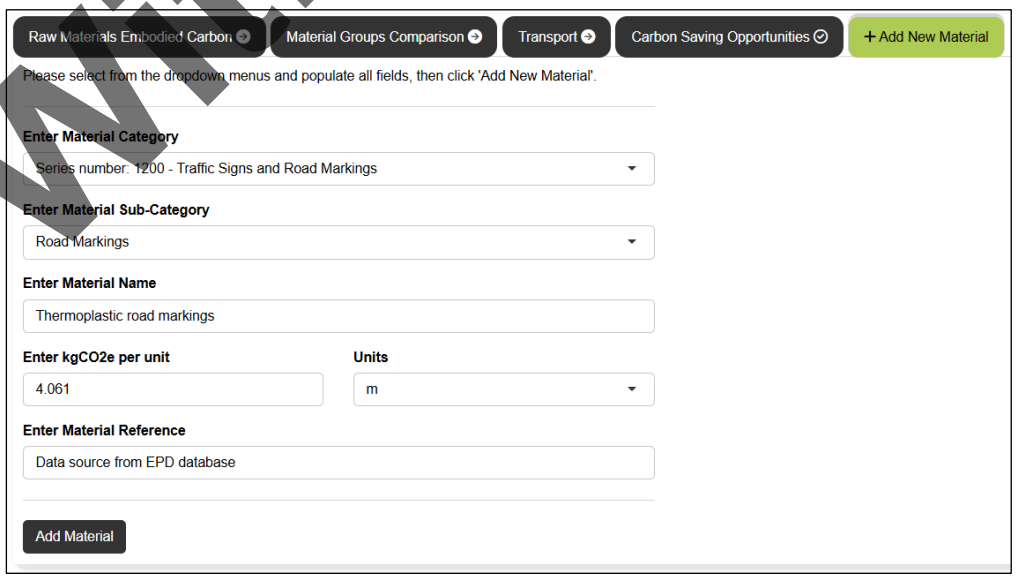

Withdrawn

e) The Tool provides two options for accounting for maintenance material impact. Users can either enter a custom factor by ticking the 'Use Custom Maintenance Value' box, or if a custom factor is not available, by using the Tool's default automatic calculation.

The automatic calculation is based upon defined replacement rates of materials during the project's lifetime. The replacement rates are expressed as a percentage of the material initially used for construction. Details of these maintenance rates are contained in the 'Emissions Factors' page in the side menu (Material (Road)) and (Material (Rail)) sections. Information on transportation of the materials should be added by selecting the mode of transport being used for transporting materials to the construction site and entering the total distance travelled to move material to the construction site (i.e., the distance should include both the journey to site and the return journey for the vehicle).

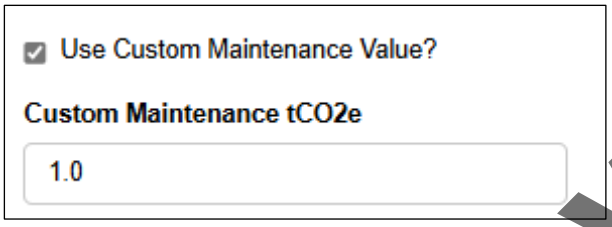




Withdrawn

3.3.4.1 Extra Features


Pop-up warning prompt

Where users select a material associated with high usage and/or a high emission factor, a warning message will be displayed flagging this, prompting the user to review lower impact alternatives. These alternatives can be explored by navigating to the Material Groups Comparison page.

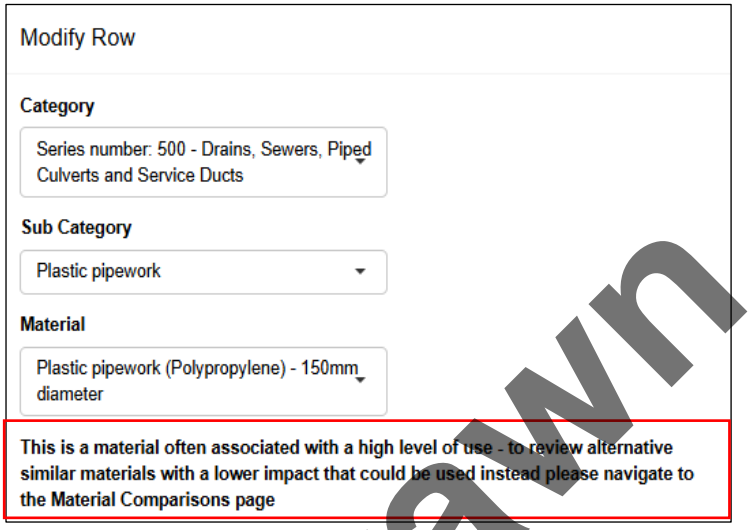

Material Groups Comparison page

Users can select two material groups for comparison (on left and right side of page), followed by the specific materials for each of these groups to be reviewed. The Tool will then automatically populate a table displaying the emissions factors for each selected material. Users can review this information, and where appropriate, substitute the flagged high-impact materials for the lower impact alternative on the Raw Materials Embodied Carbon page.

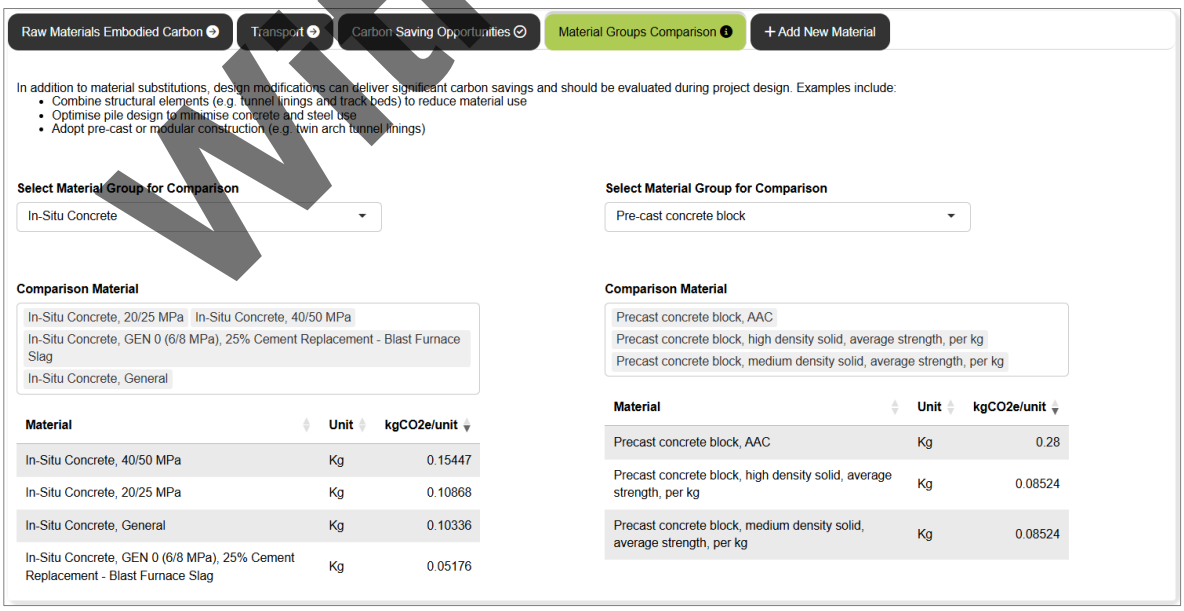

When navigating and making changes to other pages and tabs within the Tool, the data displayed in the Materials Comparison page will remain unchanged.

Withdrawn


3.3.5 Construction

Purpose of this page: The Before Use - Construction stage considers construction activities that will take place during infrastructure development, including excavation activities, energy use of construction activities, water use and waste arising from construction activities. The data entered here is used to calculate the outputs and is collated to provide the carbon footprint for construction site activities.


Data can be entered using the template download/upload function and / or the 'add'/edit' buttons.

Use the side menu bar to navigate to the **'Construction'** input page. On this page, users need to enter details of the activities that will take place during construction, including:

a) **Excavation Activities**: Select the type of excavation, the subcategory and amount of excavated material from the site.

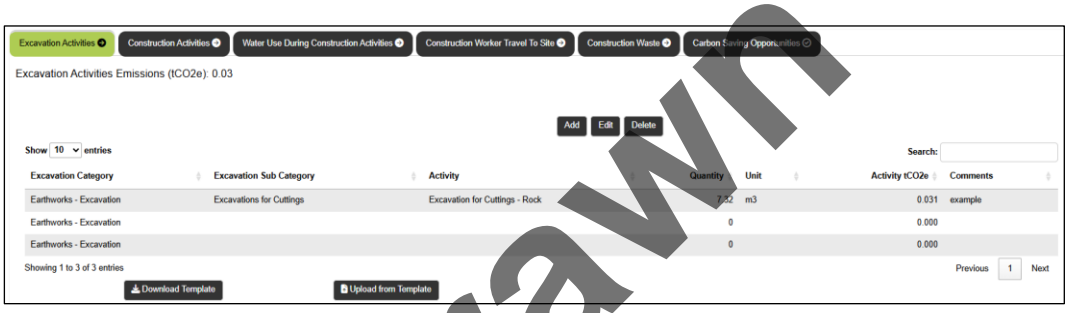


b) **Construction Activities**: Select the type of energy / fuel used for each activity undertaken during the construction of the new proposed project. Fuel use can be entered on an hourly and/or total basis. Users can hover over the question icon to review the most appropriate approach for their assessment.

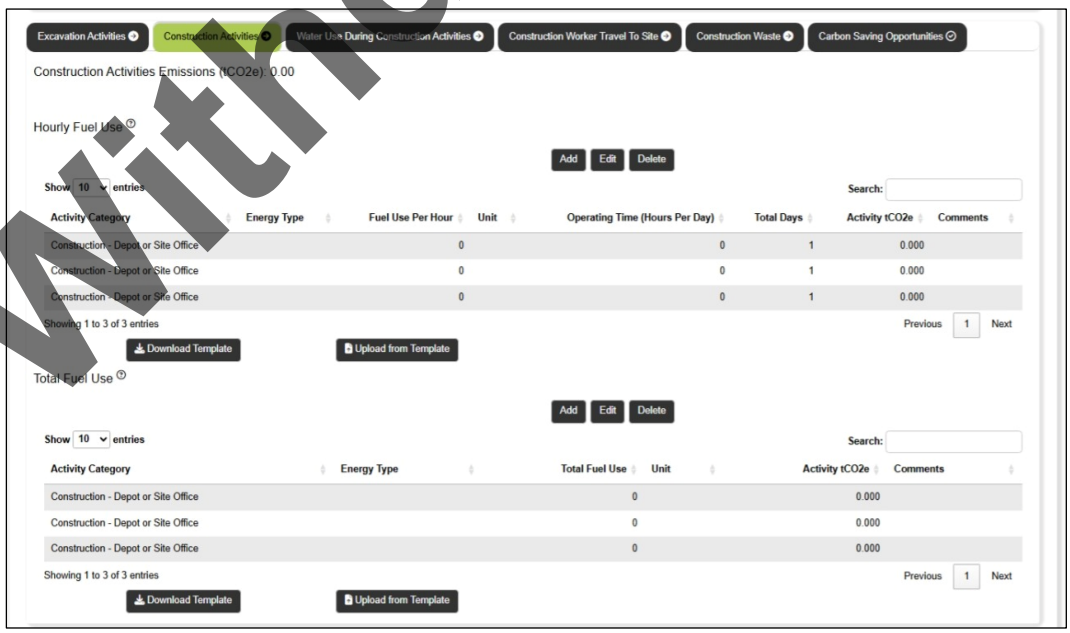


Withdrawn

c) **Water use during construction activities**: Select the type of activity which requires water during construction and enter the total amount of water used for each activity.

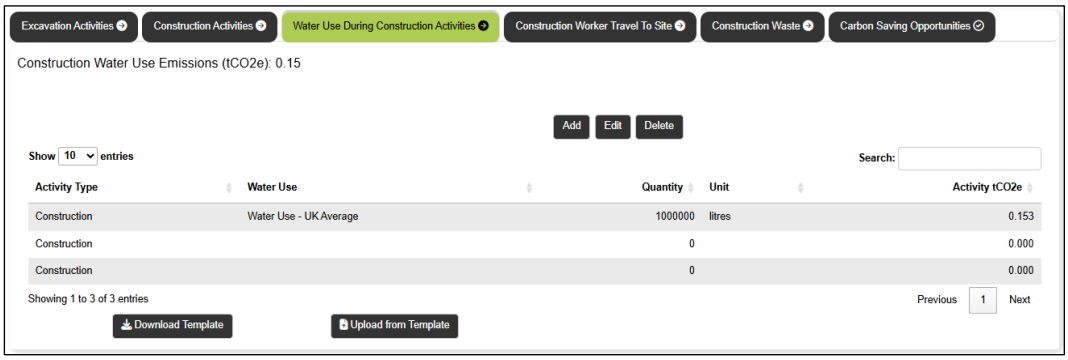

d) **Construction worker travel to site**: Select the mode of transport for workers travelling to and from work, and enter the total distance travelled by workers during construction.

For each mode of transport, the estimated return journey distance between the construction workers' addresses and the construction site have to be multiplied by the estimated working days; if the data is not available, assumptions on travel mode and distance should be made. See below for a worked example for calculating distance travelled by employees to the construction site.

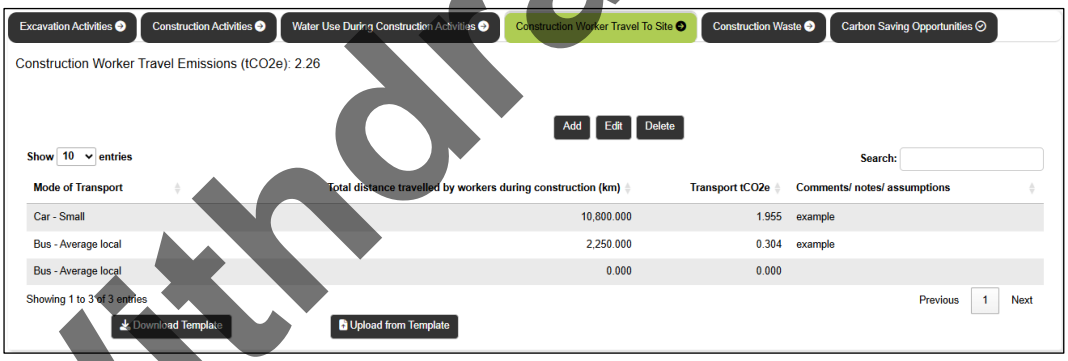

Withdrawn

It is assumed that:

- 10 employees will travel 12 kilometres each one way to the site by average car.
- 5 employees will travel 5 kilometres each one way to the site by bus.
- The construction will take 45 working days.


For each of the transport modes data should be entered separately in the table.

The distance travelled by each employee for the return journey, using the same mode should be multiplied by the number of working days during the construction period:

- Car journeys: 12 km x 2 (return journey) x 45 working days x 10 employees = total of 10,800 km.
- Bus journeys: 5 km x 2 (return journey) x 45 working days x 5 employees = total of 2,250 km.

The total distance for 10 employees who travel using the average car should be entered for 'Car – Average', and the total distance for 5 employees travelling by bus should be entered separately using 'Bus - Average local'.

e) **Construction Waste**: This input page is designed to capture and account for waste materials that are taken away from site to be disposed, reused or recycled elsewhere. Excavated material that is reused on site and therefore results in a reduction in the requirement for materials being brought to the site, is captured by the assessments conducted on the 'Pre-construction' and 'Embodied Carbon' input pages.

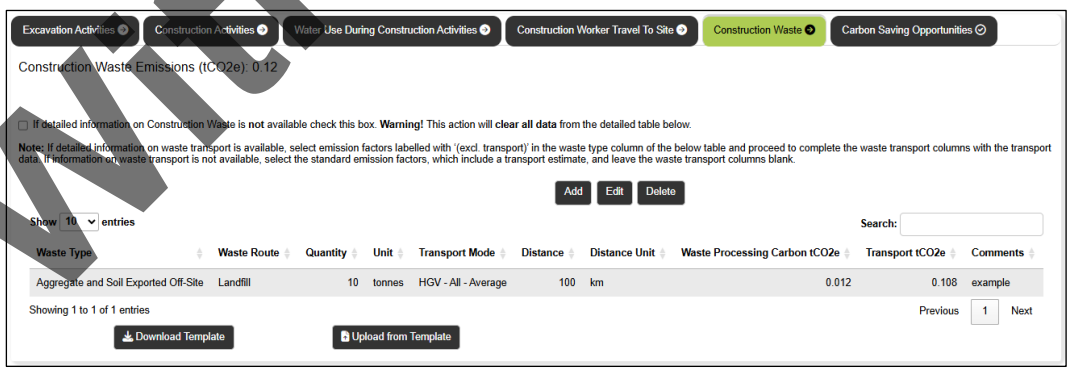

Select the type of waste arising from the construction, the waste route, and enter amount of waste generated.


There are sub-options for waste transport entry:

– If data availability allows entry of the mode of transport of the waste and distance travelled into the tool, select the '(excl. transport)' options in the waste materials category, then for each type of waste select the mode of transport used for transportation of waste to the waste centre and distance travelled for return journey. Or,

Withdrawn

- If the mode of transport of the waste and distance is not available, select the standard waste options that do not have '(excl. transport)' in the waste materials category. The transport columns must then be left blank, as transport is already embedded within these emission factors.

If this information is not available, the project waste/material assets consultant should be contacted for estimated data. As a last resort the construction cost should be provided in the tool instead, which will be used to estimate emissions arising from the construction waste using industry benchmark figures.

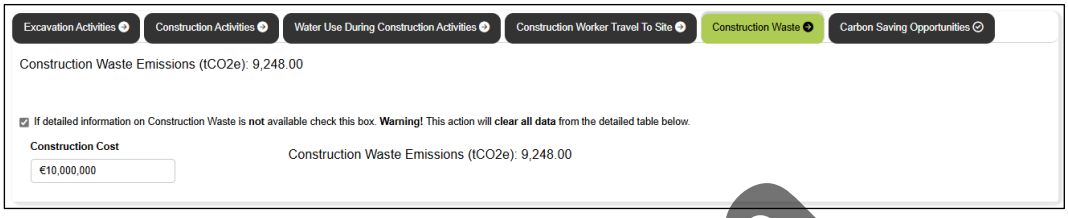

Only one of these should be completed per option.

f) **Carbon Saving Opportunities**: The first table should include opportunities that have been considered but not implemented, and the second table should include those that have been integrated to the design during this project phase.

3.3.6 Operational Use


Purpose of this page: The Operational Use page calculates emissions associated with the operation of the infrastructure project such as energy, water, and waste. Data recorded here is used to calculate the operational carbon footprint elements in the outputs page.

Data can be entered using the template download/upload function and / or the 'add'/edit' buttons.

Use the side menu bar to navigate to the **'Operational Use'** input page, in which information on the operational emissions should be entered per year of operation. The Tool will calculate annual emissions and emissions over the project design life using the value provided in the 'Project Details'.


Users should include the following information:

a) **Operational Energy Use**: Select the energy use category, choosing from lighting, signs, office facilities or other, and for each select the energy type. Then input anticipated annual energy consumption during operation.

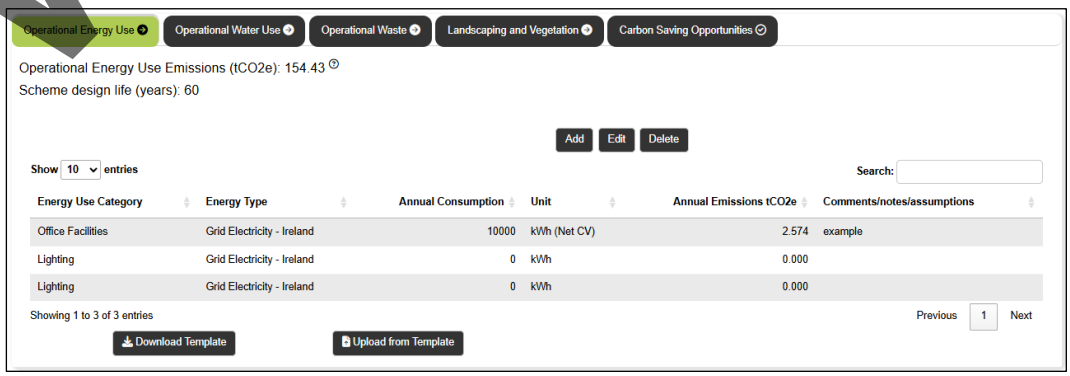


Withdrawn


b) **Operational Water Use**: Enter the quantity of anticipated annual water consumption during operation of the project.

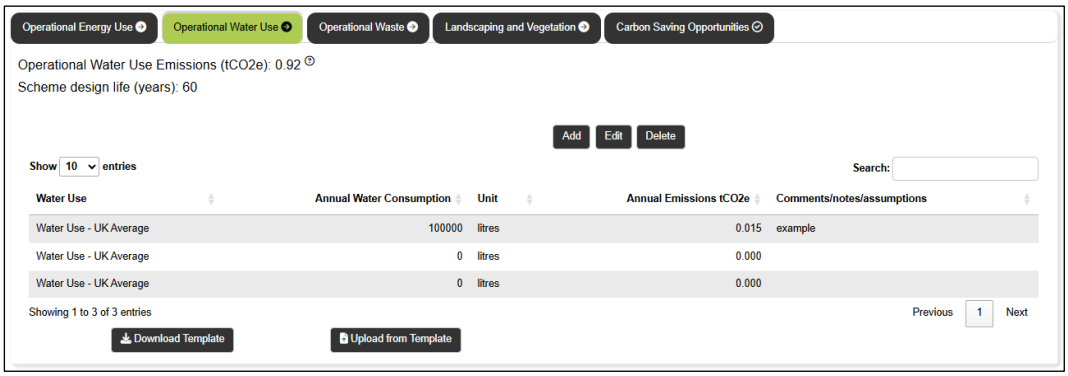

c) **Operational Waste**: Select the waste type and waste route, then enter the quantity of anticipated annual waste arisings from operation. Data on waste type and waste transport can be inputted in the same way as on the construction waste tab, with the option to include, or exclude transport from the waste emission factors.

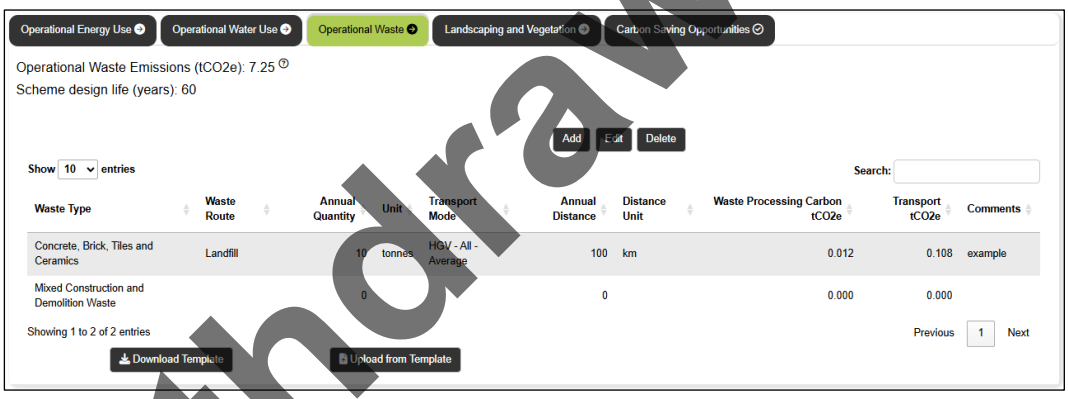

d) **Landscaping and Vegetation**: The vegetation types and areas of planting that will be added as part of the project's development.

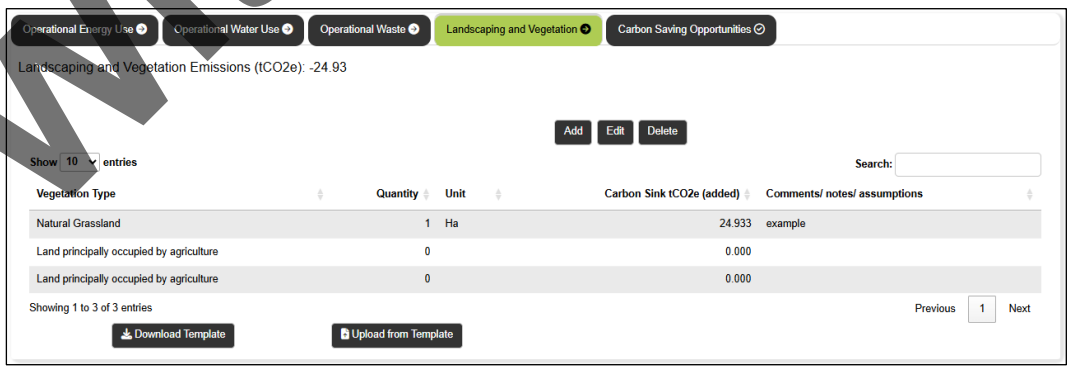

e) **Carbon Savings Opportunities**: The first table should include opportunities that have been considered, and the second table should include those that have been integrated to the design during this project phase.

Withdrawn

3.3.7 User Emissions


Purpose of this page: The user emissions pages calculate emissions associated with the use of the infrastructure by the users. The data inputted will vary between road, greenway, and light rail infrastructure.

Data can be entered by modifying the row by selecting the 'edit' button.

3.3.7.1 Road Projects

Use the side menu bar to navigate to the **'Road User Emissions'** input page, in which the following information should be entered:

a) **Vehicle Use**: For this input, enter CO_2e data for the Do-Minimum and Do-Something scenarios extracted from the REM tool[8], this should be the sum of the annual CO_2e for the duration of the development's lifetime. The Tool will differentiate between Do-Something and Do-Minimum scenarios.

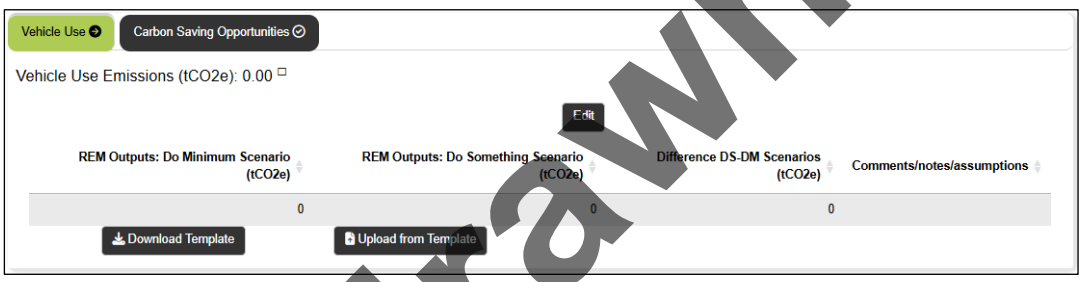

- If the difference between Do-Something and Do-Minimum scenarios is negative this means that the emissions arising from road users decrease when compared to Do-Minimum scenario.
- If the difference between Do-Something and Do-Minimum scenarios is positive this means that the emissions arising from road users increase when compared to Do-Minimum scenario.

Withdrawn


[8] TII Road Emissions Model (REM): Model Development Report, Dec 2022, GE-ENV-01107

3.3.7.2 Light Rail Projects

Use the side menu bar to navigate to the **'Rail User Emissions'** input page. This page calculates emissions anticipated with the use of the light rail infrastructure and change in CO_2e emissions from road users, as a result of replacing vehicle journeys with light rail journeys. To calculate this the Tool uses energy consumption required for operating trains and emissions from road users for the modelled affected road network without (Do-Minimum scenario) and with the light rail project (Do-Something scenario).

The following information should be entered:

a) In the **'Road Use'** table input, enter CO_2e data extracted from the REM model for the Do-Minimum scenario and Do-Something scenario, this should be the sum of the annual CO_2e data for the duration of the development's lifetime.

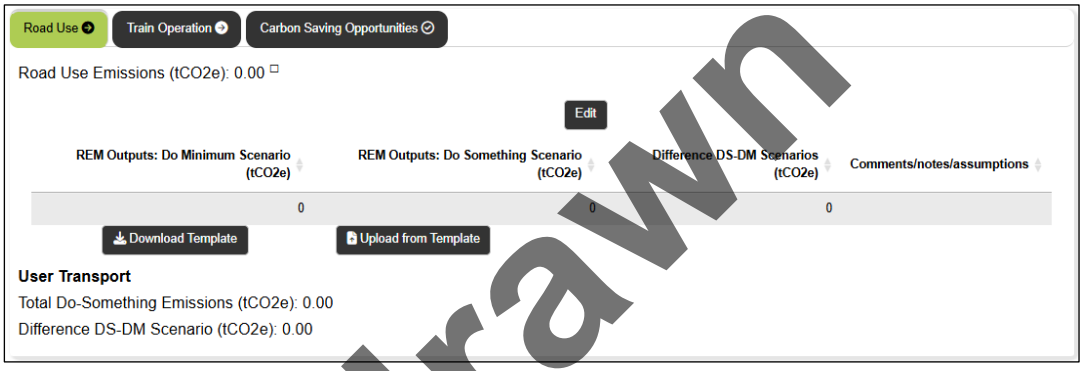

b) Then in the **'Train Operation'** table enter the anticipated annual energy consumption for operating the trains.



c) The Tool will calculate total emissions for the Do-Something scenario and the difference between the Do-Something scenario and Do-minimum scenario.

- If the difference between Do-Something scenario and Do-minimum scenario is negative this means that the emissions arising from energy used to operate trains are smaller than displaced emissions from road use, calculated for the current affected network, therefore overall User Transport emissions will be reduced when compared to Do-minimum scenario.
- If the difference between Do-Something scenario and Do-minimum scenario is positive this means that the emissions arising from energy used to operate trains are larger than displaced emissions from road use, calculated for the current affected network, therefore overall User Transport emissions will be increased when compared to Do-minimum scenario.

Withdrawn

d) **Carbon Savings Opportunities**: The first table should include opportunities that have been considered, and the second table should include those that have been integrated to the design during this project phase.


3.3.7.3 Greenway Projects

Use the side menu bar to navigate to the 'Greenway User Emissions' input page. This page calculates emissions anticipated with the use of the greenway infrastructure and change in CO_2e emissions from road users, as a result of replacing vehicle journeys with greenway journeys. To calculate this the Tool requires that use data is input direct from the TEAM Tool for the project lifetime.

Data can be entered using the template download/upload function and / or the 'add'/edit' buttons.

The following information should be entered:

a) In the **'Greenway Use'** table input, enter CO_2e avoided data extracted directly from the TEAM Tool, this should be the total CO_2e avoided for the duration of the project's lifetime, in alignment with the maintenance period of the greenway inputted into the Project Details section.

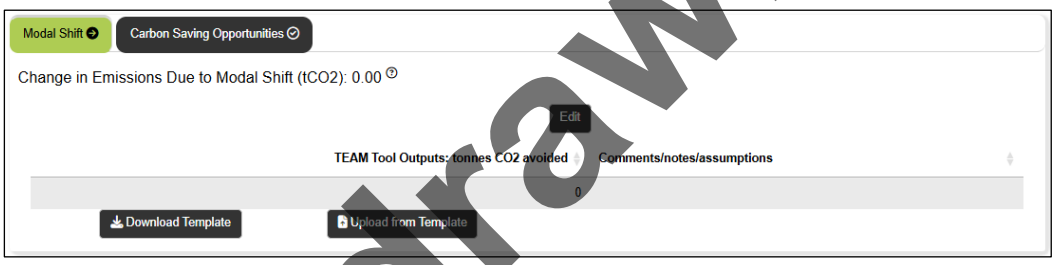

b) **Carbon Savings Opportunities**: The first table should include opportunities that have been considered, and the second table should include those that have been integrated to the design during this project phase.

3.3.8 Maintenance

Purpose of this page: The Maintenance page calculates emissions associated with the fuel used for the maintenance of the infrastructure project during its use.

Embodied carbon associated with maintenance should be captured in the Embodied Carbon tab, see section 3.3.4.


To enter fuel use associated with maintenance, use the side menu bar to navigate to the **'Maintenance'** input page, in which information on the operational emissions should be entered per year of operation, the Tool will calculate annual emissions and emissions over the project design life using the value provided in the 'Project Details'.

Data can be entered using the template download/upload function and / or the 'add'/edit' buttons.

Withdrawn

On this page, users need to enter the following information:

a) **Maintenance Plan Fuel Use**: Select plant and fuel type used for maintenance, repair, replacement and refurbishment, and input anticipated annual consumption of the fuel.

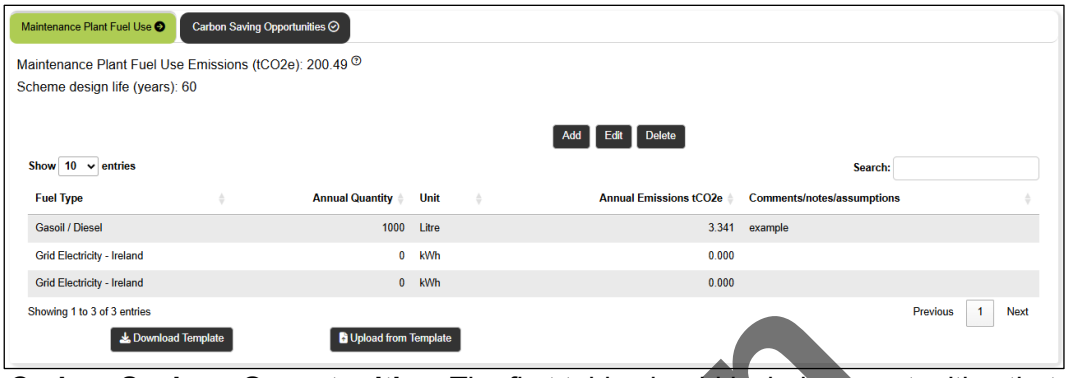

b) **Carbon Savings Opportunities**: The first table should include opportunities that have been considered, and the second table should include those that have been integrated to the design during this project phase.

3.3.9 End of Life


Purpose of this page: The End-of-Life stage captures information relating to deconstructing and demolishing of the infrastructure that will be undertaken as part of the option; this should include waste arising. The data is used to calculate the carbon footprint for the decommissioning stage.

Use the side menu bar to navigate to the final data entry tab – **'End of Life'**, in which decommissioning is considered.

Data can be entered using the template download/upload function and / or the 'add'/edit' buttons.


Here, data should be entered on deconstruction and demolition, including:

a) **Deconstruction Activities**: Select the activity category, activity type and fuel/energy type used during the deconstruction/demolition. Then provide an estimated amount of fuel/energy used per hour and enter the number of operating hours per day and the number of days during which each activity will be undertaken.

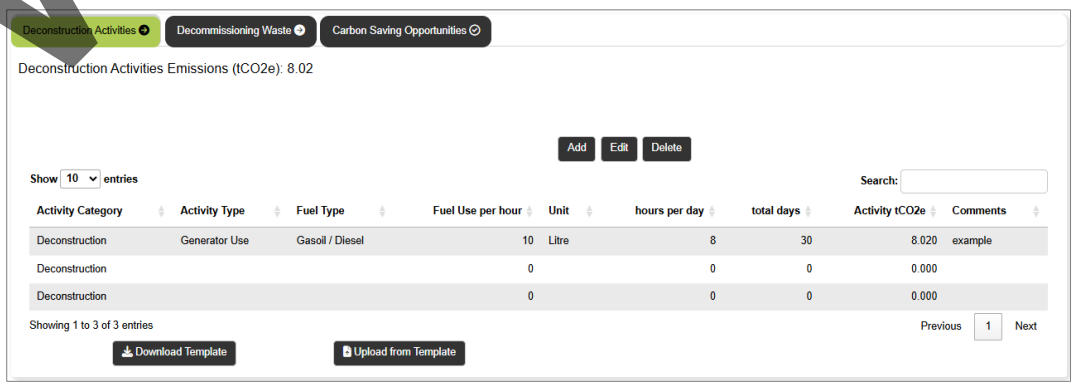

Withdrawn

b) **Decommissioning Waste**: Select the material type of disposed waste and the waste route. Then enter the amount of disposed waste. For each type of waste selected, enter the mode of transport used and the distance to the disposal end point and the distance travelled for the return journey.

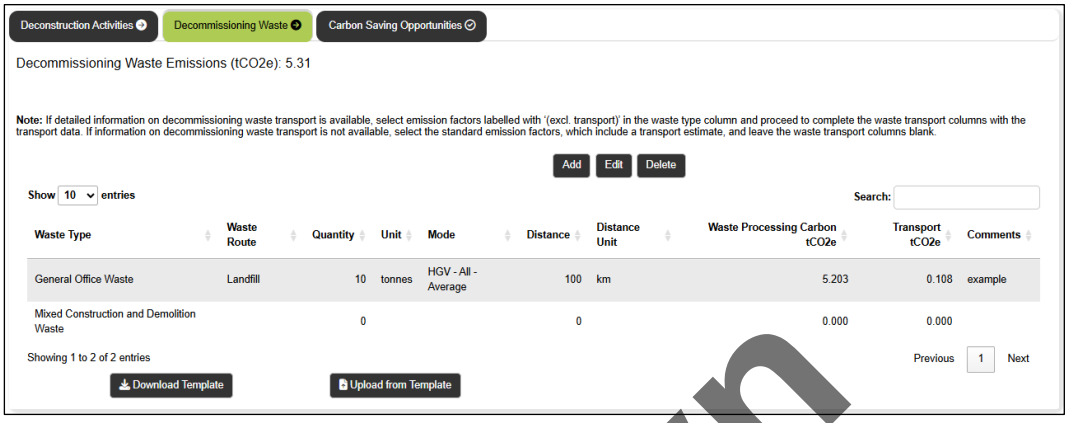

c) **Carbon Savings Opportunities**: The first table should include opportunities that have been considered, and the second table should include those that have been integrated into the design during this Phase.

3.3.10 Results

User should use the **'Save Data'** button to save the data entered and calculations made in the Tool. A save file (.sav) will then be downloaded to the user's downloads folder.

The user can view results of the assessment by selecting **'Road Summary' / 'Greenway Summary' / 'Light Rail Summary'**. Alternatively, the user can complete the details of another design option by selecting another design option in the left side menu. From here the user should begin the data entry stage again from the baseline.


The **'Road Summary' / 'Greenway Summary' / 'Light Rail Summary'** section provides users with a summary of emissions arising during each stage of the project. Additional tabs available in this section provide detailed breakdown by source of emissions, charts, emissions intensity, and carbon savings options. In graphs showing total emissions for all stages, the operational use represents the total project lifespan rather than one year's worth of emissions.

The results from the Tool can be viewed incrementally as the inputs are completed in the Summary/Dashboard tabs of the Tool. The user can also download CSV files of the summary output tables and graphs.



Withdrawn


The user can download a Pie Chart page, the option for this will appear when the cursor is on the graph. When clicking the camera symbol the message 'Download plot as png' will appear, after clicking on this the window to save the file will appear.

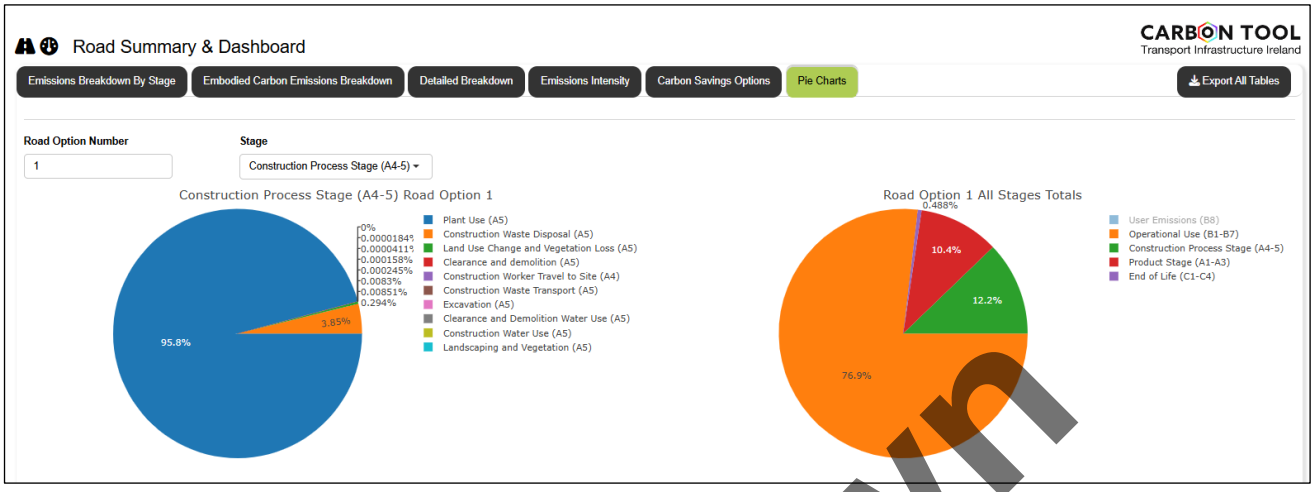

3.4 Entering Carbon Saving Opportunities

For each project phase, the Tool asks users to record information on carbon savings that have been considered and/or implemented during that particular stage. This data entry section can be found within each project phase page, and consists of two tables, as follows:

- The first table requests information on options that were considered but not implemented; this is important as it provides a record of considered options that were not feasible at this stage, which could prevent duplicating assessments of the same options later in the project.
- The second table requests information on carbon-saving measures that have been implemented as part of this stage; this is important to demonstrate that low-carbon design is being considered and implemented where possible throughout the project.

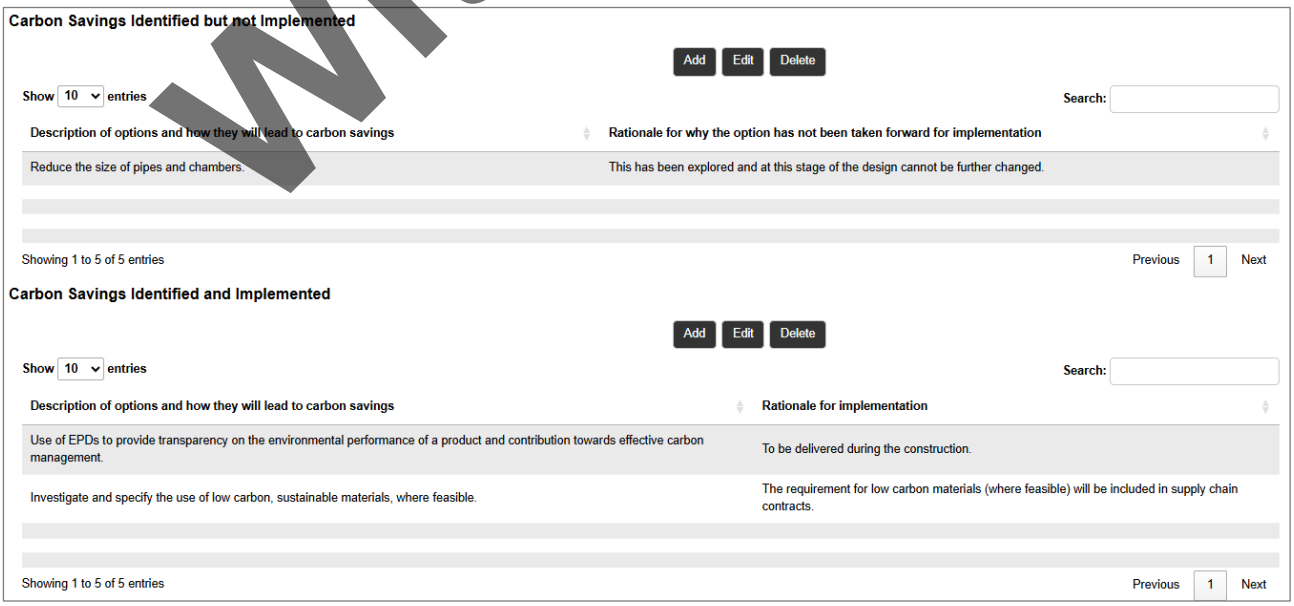

Withdrawn

Users should provide a short narrative of the options considered for that particular project phase (e.g. pre-construction) and should include estimates of the potential carbon emission savings achievable through the implementation of each option when compared to more conventional processes, material, and approaches. The rationale for selection or non-section should also be recorded in this table for each option.

During Project Phases 0, 1 and 2, emission savings are very likely to be high-level estimates but should still be added. If completely unknown, please leave blank. During Phases 3 to 7, emissions savings can be entered in more detail and should include written descriptions of anticipated savings. Potential sources of emission saving values may include data from material suppliers, the conversion of energy-use savings into carbon savings as a result of more efficient processes, and indicative savings identified when inputting different project options into the Tool.


The Tool collates all options inputted into these sections as an output list of carbon-saving opportunities on the detailed outputs tool page.

3.5 Summary Page: Extracting Results

Tables with results can be extracted in the format of MS Excel file using 'Export All Tables' or 'Export Table' buttons. Pie charts can be extracted as pictures by clicking the camera icon in the right corner when in the section 'Pie Chart'.

Examples below show outputs for a road project with two potential design options.


Example 1: Emissions Breakdown by Stage

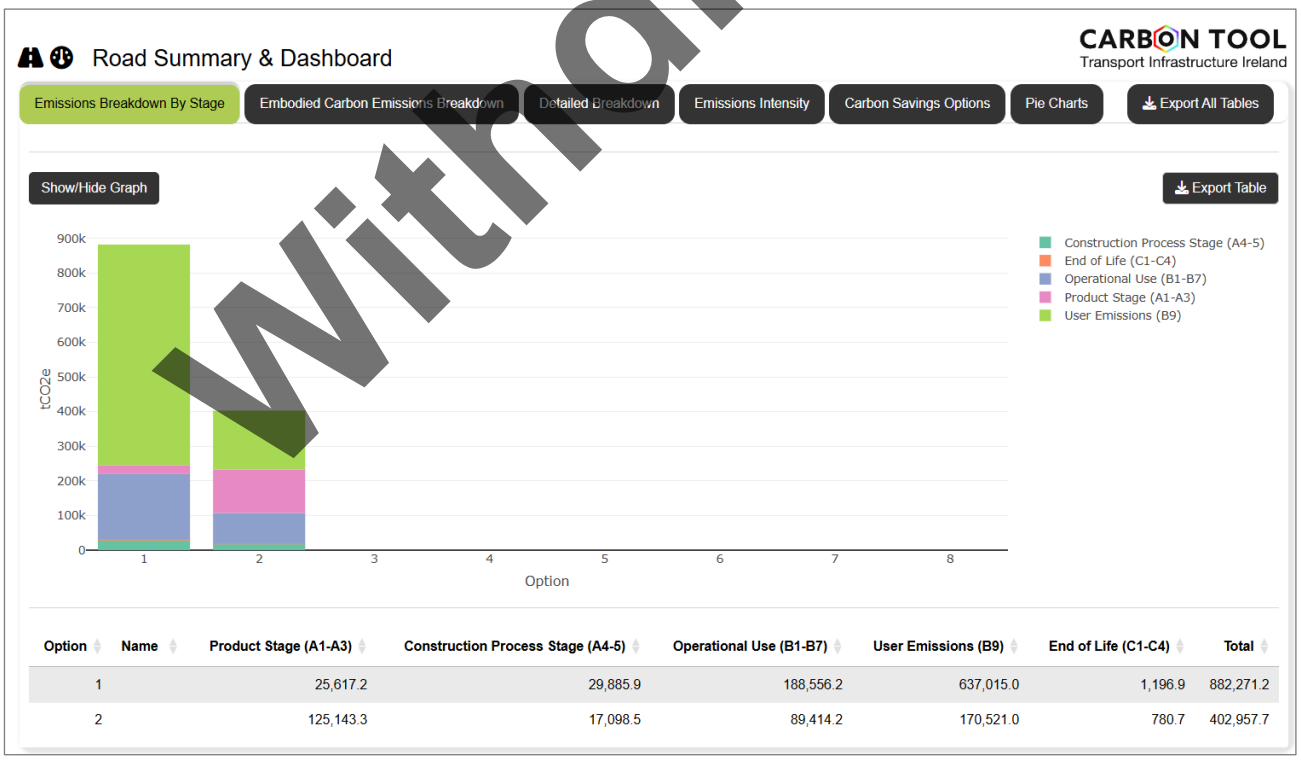

Option	Name	Product Stage (A1-A3)	Construction Process Stage (A4-5)	Operational Use (B1-B7)	User Emissions (B9)	End of Life (C1-C4)	Total
1		25,617.2	29,885.9	188,556.2	637,015.0	1,196.9	882,271.2
2		125,143.3	17,098.5	89,414.2	170,521.0	780.7	402,957.7

Withdrawn

Example 2: Emissions Breakdown by Material

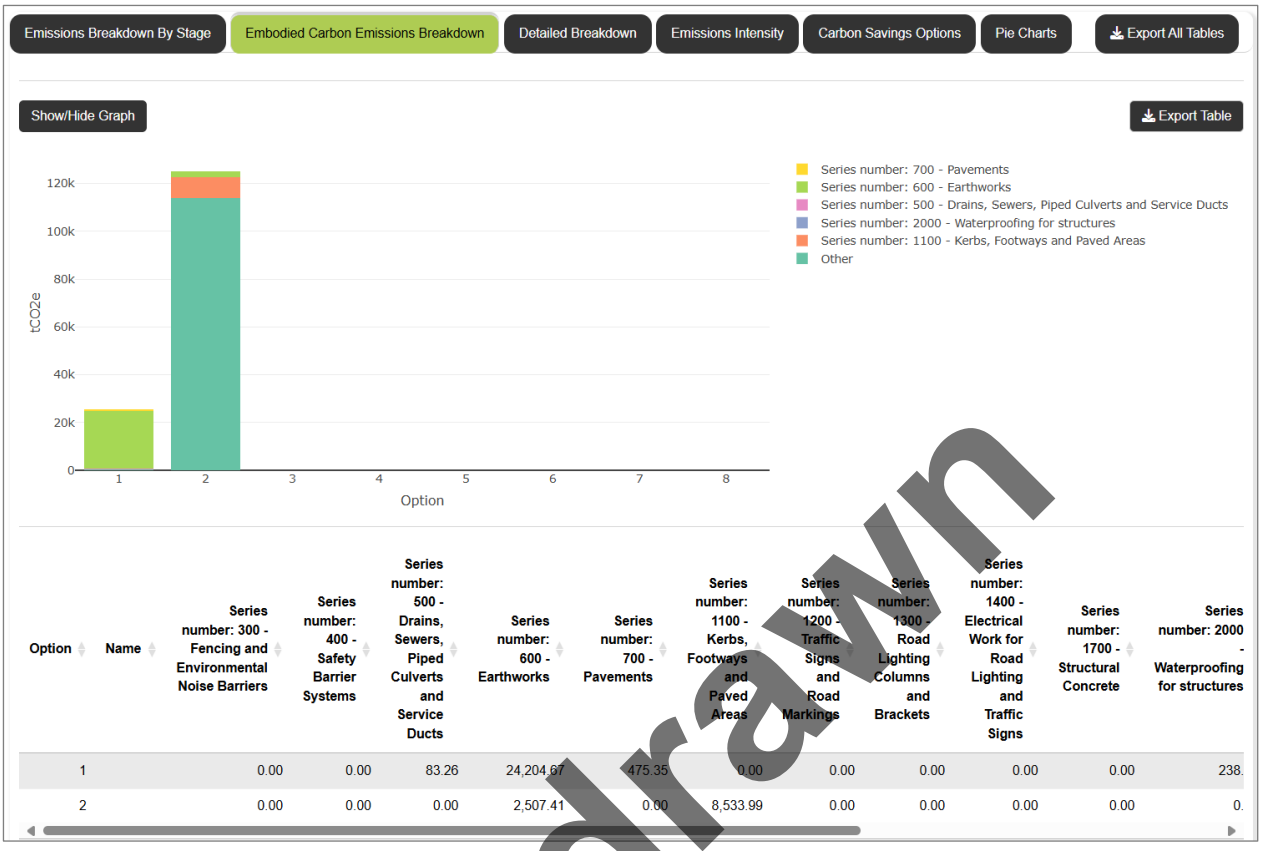

Option	Name	Series number: 300 - Fencing and Environmental Noise Barriers	Series number: 400 - Safety Barrier Systems	Series number: 500 - Drains, Sewers, Piped Culverts and Service Ducts	Series number: 600 - Earthworks	Series number: 700 - Pavements	Series number: 1100 - Kerbs, Footways and Paved Areas	Series number: 1200 - Traffic Signs and Road Markings	Series number: 1300 - Road Lighting Columns and Brackets	Series number: 1400 - Electrical Work for Road Lighting and Traffic Signs	Series number: 1700 - Structural Concrete	Series number: 2000 - Waterproofing for structures
1		0.00	0.00	83.26	24,204.67	475.35	0.00	0.00	0.00	0.00	0.00	238.
2		0.00	0.00	0.00	2,507.41	0.00	8,533.99	0.00	0.00	0.00	0.00	0.

Withdrawn


3.6 Worked Example for each Stage of the Carbon Tool

The level of detail that can be inputted to the Tool will depend on the project phase, as defined in Table 3.1 (in Part 1 of this document). This worked example shows the expected level of detail required for a typical Phase 3 project (the Design & Environmental Evaluation / Preliminary Design Phase) and provides pointers for the required level of detail for subsequent project phases within each stage of the tool. Note that the precise inclusions will be determined on a project-by-project basis by the EIA Scoping process. Once a stage, or part of a stage, within the Tool has been scoped out, it should not be included during any project phase; doing so would invalidate any comparisons made between project phases.

This example looks at a new stretch of road in Ireland, approximately 7km long. The purpose of the project is to reduce traffic flows on existing infrastructure and speed up journey times between two locations. The data used was taken from that gathered for the EIA report. Where assumptions on data had to be made, this has been indicated and pointers towards sources provided; although note that these will differ, depending on the project team.

Example: Step 1 - Enter Project Details

Enter project details, providing as much detail as possible.

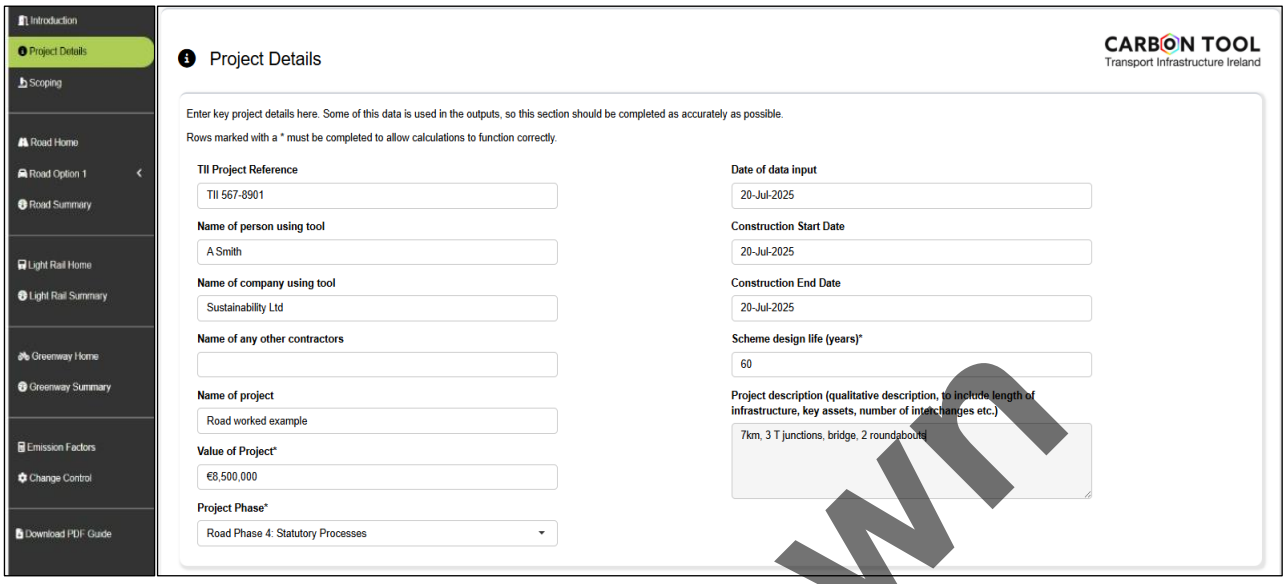


The level of data entry required for this stage per project phase is as follows:

- **Phases 0 and 1:** Qualitative details, such as the project reference and name, credentials of person and company completing the form, date of input, project phase and project description.
- **Phase 2:** All qualitative details should be known. If there are other contractors working on the project, these should be included or if they are unknown, type “Unknown”, or if there are no others, type ”None”. Estimates of project value and design life should now be available.
- **Phases 3, 4, 5, 6 and 7:** All qualitative and quantitative details should now be known, or estimates should be available. The Value of Project and Project Design Life are both particularly important and must be completed to enable the intensity outputs section to be calculated by the Tool.

Withdrawn

Example: Step 2 - Scoping

In the Scoping menu, select the number of road, rail and greenway options using the dropdown options at the top of the page, and then complete the five tabs relating to each project stage once the EIA Scoping report has been submitted and accepted. The tabs should be completed by stating whether an activity has been 'scoped in' or 'scoped out' in the dropdown menus. Where an activity is excluded, a justification of the exclusion, in line with the Scoping Report, should be provided.

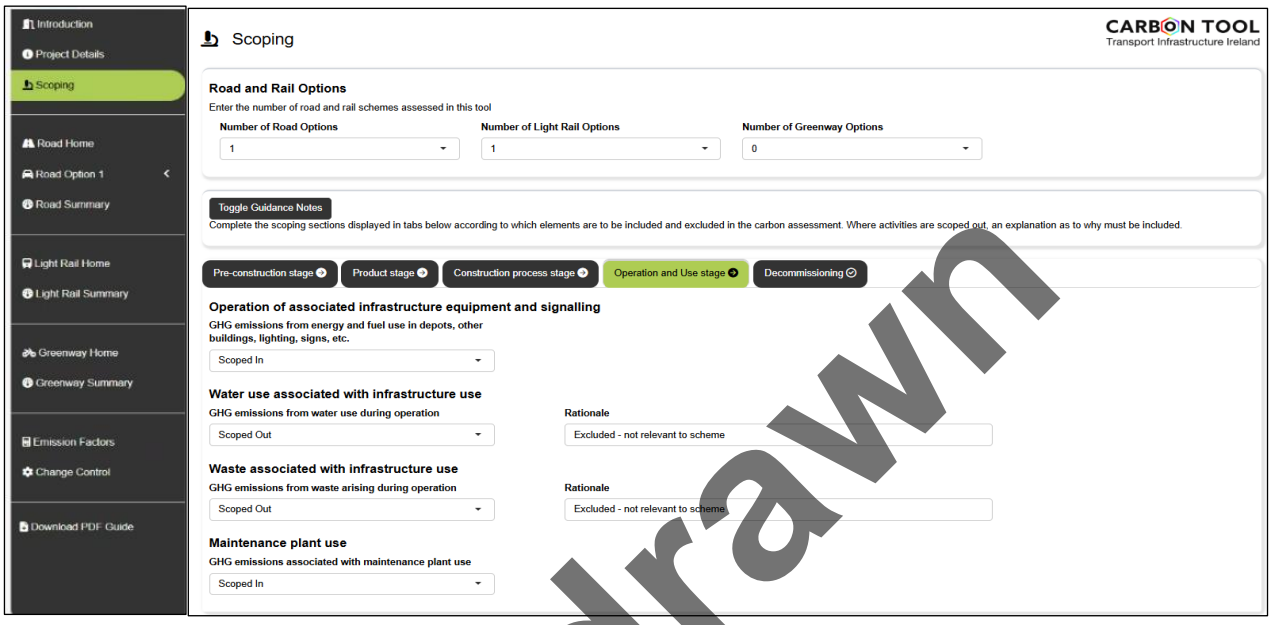

The level of data entry for this stage per project phase is:

- **Phases 0, 1 and 2:** Unlikely that scoping will be done during these project phases; however, the table can be used for project planning and as a guide for early data collection, especially for a major project.
- **Phases 3, 4, 5, 6 and 7:** This table must be complete at Phase 3 and adhered to throughout the assessment, in accordance with the EIA Scoping Report. Only if the scope of the EIA changes, should this table be adjusted. It should be used through the last 5 phases of the project to determine which stages and sections within the Tool are completed.

Example: Step 3 – Road Home, Greenway Home, or Light Rail Home

This is the Homepage for either a road project, greenway project or a light rail project, depending on the type of project being assessed.

Withdrawn

Previous Data

Phase of the Road project you are currently working on:

Road Phase 0: Programme Overview & Requirement Definition

Input or copy data from previously completed version of the tool into this table

The data to be used to populate this table should be taken (copied and pasted) from the summary table at the top of the 'Detailed Outputs Page' of the previously populated version of the tool. If this is the first time that the tool is being used for this particular project, this table should be left blank.

Option	Product Stage Carbon (tCO2e)	Construction Process Stage Carbon (tCO2e)	Operational Use Carbon (tCO2e)	User Carbon Emissions (tCO2e)	End of Life Carbon (tCO2e)	Total Carbon (tCO2e)
Option 1	0.00	0.00	0.00	0.00	0.00	0.00
Option 2	0.00	0.00	0.00	0.00	0.00	0.00
Option 3	0.00	0.00	0.00	0.00	0.00	0.00
Option 4	0.00	0.00	0.00	0.00	0.00	0.00
Option 5	0.00	0.00	0.00	0.00	0.00	0.00
Option 6	0.00	0.00	0.00	0.00	0.00	0.00
Option 7	0.00	0.00	0.00	0.00	0.00	0.00
Option 8	0.00	0.00	0.00	0.00	0.00	0.00
Option 9	0.00	0.00	0.00	0.00	0.00	0.00
Option 10	0.00	0.00	0.00	0.00	0.00	0.00

Download Template Upload from Template

To use the output table from the previous phase (if applicable) use the upload function. If you wish to populate new information, use the download function. Note that the table is blank in this example as no data was completed prior to Phase 4.

The level of data entry for this stage per project phase is:

- **Phases 0, 1, 2:** It is unlikely that data will be completed before Phase 3, therefore if data is not available this table will be blank.
- **Phase 3:** If the assessment has been undertaken at Phase 2 for multiple design options data should be added to the table.
- **Phases 4, 5, 6 and 7:** Results from previously undertaken assessment should be copied and pasted into the table on the Road, Greenway, or Light Rail Homepage.

High Level Design

Some sections within this tab are used in the output for individual projects and overall is important for TII as they collate data on projects for benchmarking. To populate this tab users can use the download and upload function.

Enter details of the planned route corridor options and the baseline conditions.

Option	Names	Description	Distance (km)	Number of Bridges	Total length of Bridges (m)	Number of Tunnels	Total length of Tunnels (m)	Number of Interchanges	Loss of previously untouched land (description)
Option 1	Final Design	Selected Option	7.00	0.00	0.00	0.00	0.00	3.00	Grassland and woodland
Option 2			0.00	0.00	0.00	0.00	0.00	0.00	
Option 3			0.00	0.00	0.00	0.00	0.00	0.00	
Option 4			0.00	0.00	0.00	0.00	0.00	0.00	
Option 5			0.00	0.00	0.00	0.00	0.00	0.00	
Option 6			0.00	0.00	0.00	0.00	0.00	0.00	
Option 7			0.00	0.00	0.00	0.00	0.00	0.00	
Option 8			0.00	0.00	0.00	0.00	0.00	0.00	
Option 9			0.00	0.00	0.00	0.00	0.00	0.00	
Option 10			0.00	0.00	0.00	0.00	0.00	0.00	

Download Template Upload from Template


The level of data entry for this stage per project phase is:

Withdrawn

- **Phases 0 and 1:** It is unlikely that data will be available; therefore, this can be left blank.
- **Phases 2:** Some information may be gathered as part of the options assessment, which could be completed. In this case, a separate row should be completed for each option considered.
- **Phases 3, 4, 5, 6 and 7:** This data should be available from Phase 3 and will be refined as the project phases progress; therefore, the data should be updated for each Phase.

Example: Step 4: Populate the Road/Greenway/Light Rail Option Menus

Baseline Data

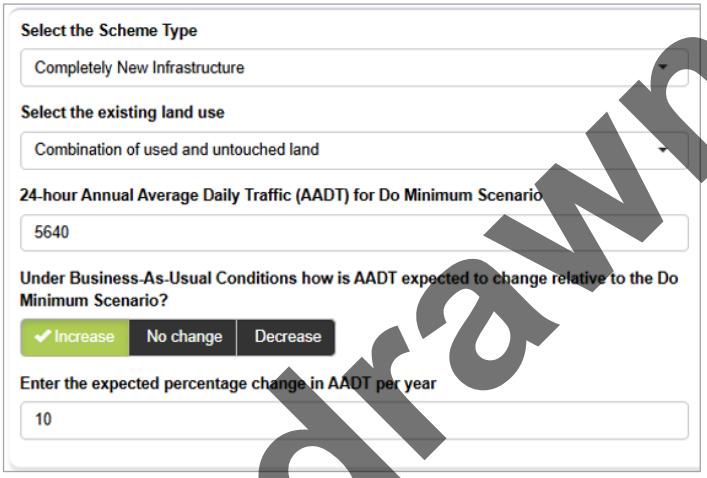

Withdrawn

This stage covers the existing conditions and changes needed to build the project. The level of data entry for this stage per project phase is:

- **Phases 0 and 1:** It is unlikely that data will be available; therefore, this can be left blank.
- **Phases 3, 4, 5, 6 and 7:** Data should be available, including estimates of land take and operational data such as annual average daily traffic (AADT) (road) and rail vehicle movements (light rail).

As in the example, the landscaping team should be able to provide data on land take and land use type, while transportation modellers are likely to hold baseline travel information. It will be refined throughout the project so should be updated for each project phase.

Pre-Construction

This stage covers land clearance and preparation before construction takes place. The following information should be provided here:


- Details of clearance and demolition activities such as type of activity and current type of land and size of the area to be cleared.

Clearance Category	Subcategory	Activity	Quantity	Unit	Activity Emissions tCO2e	Comments
Demolition and Site Clearance	General Clearance	General clearance - general site clearance	0.35	ha	0.154	
Demolition and Site Clearance	General Clearance	General clearance - land principally occupied by agriculture	2.85	ha	1.252	
Demolition and Site Clearance	General Clearance	General clearance - mixed forest	0.87	ha	1.147	
Demolition and Site Clearance	General Clearance	General clearance - natural grassland	0.21	ha	0.092	


Showing 1 to 4 of 4 entries Previous 1 Next

Download Template Upload from Template

- Details of Land Use Change and Vegetation such as the type and quantity of vegetation and planting that will be lost as part of the project.

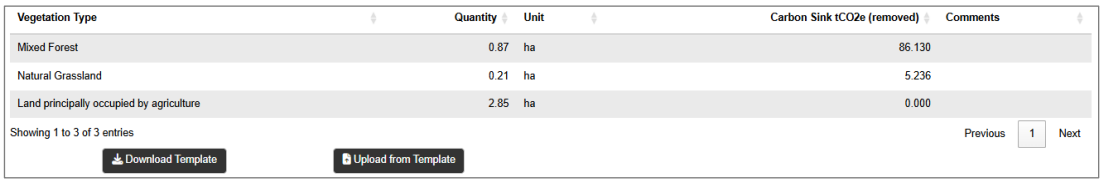


- Volume of water to be used during clearance and demolition activities. This is most likely to be available in the later stages of the project.

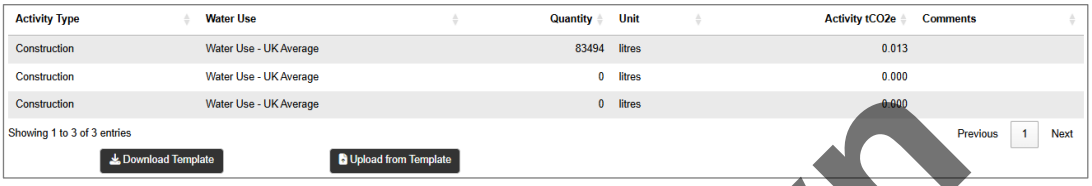

The level of data entry for this stage per project phase is:

- **Phases 0 and 1:** It is unlikely that data will be available; therefore, this can be left blank.
- **Phases 2:** Some information may be gathered as part of the options assessment, which could be completed. In this case, use the extra pages provided for different options. These can be navigated to via the Road, Greenway, or Rail Homepage.
- **Phases 3, 4, 5, 6 and 7:** This data should be available from Phase 4 and will be refined as the Phases progress; therefore, the data should be updated for each project phase. The data entered on the baseline stage related to land clearance can be used here, but note the changes in units for some aspects, required due to the nature of the calculation (the baseline Stage calculates carbon sequestration; this stage calculates the emissions arising from undertaking land clearance). In this example, the number of buildings to be demolished is required, while in the Baseline stage, the area of land take covered by buildings is required in metres squared.

From this point forward in the Tool, **carbon savings opportunities** can be recorded for each stage. These should be recorded in as much detail as possible during each project phase, to build an impression of design progress in relation to carbon-saving measures. During Phases 5, 6 and 7, quantitative data should be recorded here if available.

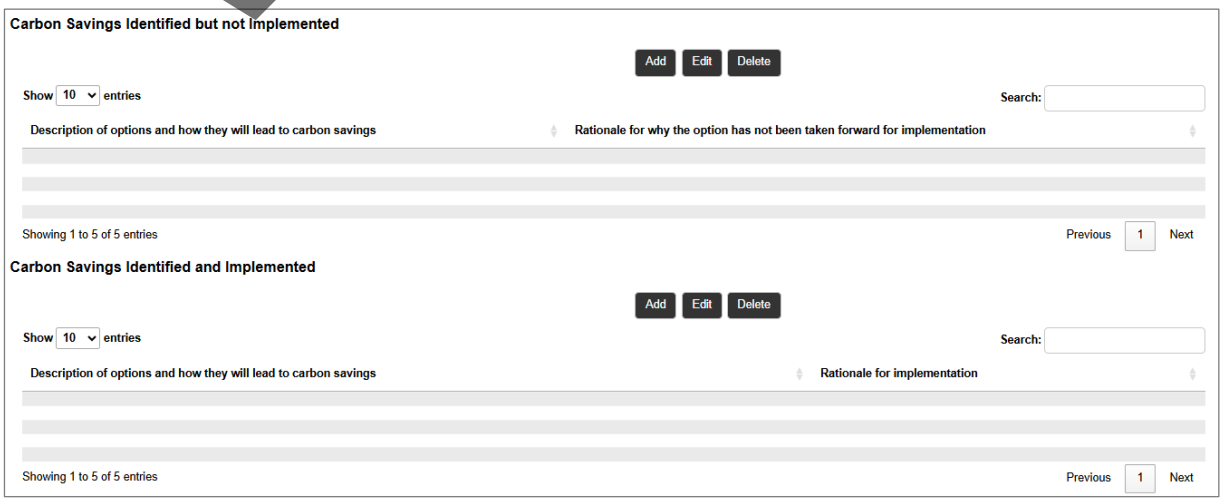

Withdrawn

Embodied Carbon

This stage captures the embodied emissions (GHG emissions associated with material extraction and manufacture, as well as material transport to the construction site. Where materials associated with high usage and/or a high emission factor have been selected, a warning message will be displayed flagging this, prompting the user to review lower impact materials. These can be explored by navigating to the Material Groups Comparison page.

The following information should be provided here:

- The raw materials tab should be populated using the 'add/edit' button or the download/upload function to select category, subcategory, and material. Quantities should be entered in unit provided.

Category	Sub Category	Material	Quantity	Unit	Default Maintenance Percentage	Embodied tCO2e	Maintenance tCO2e	Comments
Other	Structural steelwork	Column	353.46	tonne	0.000	494.486	0.000	
Series number: 700 - Pavements	Pavement Base and Sub base	Aggregates and sand, general UK, mixture of land won, marine, secondary and recycled, bulk, loose	63633900	kg	0.000	475.345	0.000	
Series number: 500 - Drains, Sewers, Piped Culverts and Service Ducts	Concrete Gullies, or equal and approved	Gullies - Precast concrete gully pots (heavy duty)	390	Nr	0.000	34.189	0.000	
Series number: 500 - Drains, Sewers, Piped Culverts and Service Ducts	Headwalls and Revetments	Brick manholes and inspection chamber (includes mortar)	275	Nr	0.000	0.000	0.000	
Series number: 500 - Drains, Sewers, Piped Culverts and Service Ducts	Plastic pipework	Plastic pipework (HDPE) - 600mm diameter	951	m	0.000	49.084	0.000	
Series number: 600 - Earthworks	Backfill/Fill	Aggregates and sand, general UK, mixture of land won, marine, secondary and recycled, bulk, loose	3240250000	kg	0.000	24,204.667	0.000	
Series number: 2000 - Waterproofing for structures	Waterproofing and coatings	Geotextiles ground stabilising 300mm	411469	m2	0.000	238.646	0.000	

Bespoke material and associated emission factors can be added to the Tool by clicking 'Add New Material' at the top of the table.

- Total distance travelled for the transportation of materials should be calculated and entered. The example below presents how to calculate total distance travelled to transport steel columns using quantity of steel in the embodied carbon page.

Assumptions made: a maximum weight laden of HGV is 44 tonnes; the distance between the factory/warehouse and the site 25km. All assumptions have been listed in the comments section.

In order to transport steel columns (353.46 tonnes as per quantity in the embodied carbon) a total of 9 return trips (353.46/44=8.03 so rounded to 9) between the site and the factory/warehouse would be needed.

The estimated number of return trips is then multiplied by the distance between the factory/warehouse and the site (9 x 25km x 2 = 450km), the total distance for transport materials to be entered in the Tool is 450km.

In the example below, transport has been estimated for the key materials with highest quantities.

Transport Type	Distance	Unit	Transport tCO2e	Comments
HGV - Articulated - Average	450	km	0.506	Steel columns: a maximum weight laden of HGV assumed 44 tonnes; the distance between the factory/warehouse and the site 25km
HGV - Articulated - Average	77980	km	87.711	Imported soil, a maximum weight laden of HGV assumed 44 tonnes; the distance assumed 10km
HGV - Articulated - Average	28940	km	32.551	General fill/aggregate; a maximum weight laden of HGV assumed 44 tonnes; the distance assumed 10km.
HGV - All - Average	0	km	0.000	
HGV - All - Average	0	km	0.000	

Showing 1 to 5 of 5 entries Previous 1 Next

Download Template Upload from Template

Withdrawn

The level of data entry for this stage per Phase is:

- **Phases 0 and 1:** It is unlikely that data will be available; therefore, this can be left blank.
- **Phases 2:** Some information may be gathered as part of the options assessment, key materials may only be estimated, which could be completed.
- **Phases 3, 4, 5, 6 and 7:** This data should be available in some form from Phase 4 and will be refined as the Phases progress; therefore, the data should be updated for each project phase. Carbon assessments from EPDs may be used and should be completed using the 'Add New Material' form. As the project phases progress, it is likely that more granularity on material types is specified in the design. Carbon-saving opportunities should be recorded as they are assessed.

Construction

This stage captures the construction activities on site. There are five sections to complete, as follows:

- Details of excavation activities such as the type of excavation by category and sub-category as well as the activity, indicating the type and amount of excavated material.

Excavation Category	Excavation Sub Category	Activity	Quantity	Unit	Activity tCO2e	Comments
Earthworks - Excavation	Excavations for Foundations	Excavation for Foundation - Topsoil	20	m3	0.022	
Earthworks - Excavation	Excavations for Foundations	Excavation for Foundation - Rock	5	m3	0.024	
Earthworks - Excavation	General Excavation	General Excavation - Topsoil	5	m3	0.004	
Earthworks - Excavation			0		0.000	
Earthworks - Excavation			0		0.000	

- Details of construction activities requiring energy use including the type of energy / fuel used for each activity during the construction. The estimated amount of fuel/energy used per hour, the number of operating hours per day and the number of days during which each activity will be undertaken. A list of specific activities, such as the amount of fuel used by plant and generators, is likely to be known in the later stages of the project.

Activity Category	Energy Type	Fuel Use Per Hour	Unit	Operating Time (Hours Per Day)	Total Days	Activity tCO2e	Comments
Construction - Plant Use	Gasoil / Diesel	15180	Litre	5	90	22,825.759	Plant
Construction - Generator Use	Gasoil / Diesel	4631	Litre	5	90	6,963.511	Lighting
Construction - Depot or Site Office		0		0	1	0.000	
Construction - Depot or Site Office		0		0	1	0.000	
Construction - Depot or Site Office		0		0	1	0.000	

- Volume of water use to be used during clearance and demolition activities. This is most likely to be available in the later stages of the project.

Activity Type	Water Use	Quantity	Unit	Activity tCO2e
Construction	Water Use - UK Average	37451	litres	0.006
Construction		0		0.000
Construction		0		0.000
Construction		0		0.000
Construction		0		0.000

Withdrawn

- 'Construction Worker Travel to Site' includes the following types of transport modes and estimated total commuting distance by each mode of transport. The example below applies assumptions from example discussed in previous chapter (Section 3.3.5).

Mode of Transport	Total distance travelled by workers during construction (km)	Transport tCO2e	Comments/ notes/ assumptions
Car - Average	10,800.000	2.278	Return journey, 12 km one way, 45 working days, 10 employees
Bus - Average local	2,250.000	0.304	Return journey, 5km, 45 working days, 5 employees
Bus - Average local	0.000	0.000	
Bus - Average local	0.000	0.000	
Bus - Average local	0.000	0.000	

- Details of the waste arising from the construction activities, such as type of waste, route, quantity, and distance to the waste processing unit. Note the different options for waste data entry, as detailed in section 3.3.5.

Waste Type	Waste Route	Quantity	Unit	Transport Mode	Distance	Distance Unit	Waste Processing Carbon tCO2e	Transport tCO2e	Comments
Aggregate and Soil Exported Off-Site	Recycled	12607	tonnes	HGV - Rigid - Average	15	km	12.416	0.015	
Aggregate and Soil Exported Off-Site	Landfill	664	tonnes	HGV - Rigid - Average	10	km	0.819	0.010	
Mixed Construction and Demolition Waste	Landfill	11480	tonnes	HGV - Articulated - Average	10	km	1,182.507	0.011	
Mixed Construction and Demolition Waste	Recycled	1120	tonnes	HGV - Articulated - Average	15	km	1.103	0.017	
Wood or Timber	Reuse Off-Site	383	tonnes	HGV - Articulated - Average	20	km	0.000	0.022	

The level of data entry for this stage per project phase is:

- **Phases 0 and 1:** It is unlikely that data will be available; therefore, this can be left blank.
- **Phases 2:** Some information may be gathered as part of the options assessment, which could be completed. In this case, use the extra pages provided for different options. These can be navigated to via the Road, Greenway, or Light Rail Homepage.
- **Phases 3, 4, 5, 6 and 7:** This data should be available in some form from Phase 4 and will be refined as the project phases progress; therefore, the data should be updated for each project phase. General factors and assessment, based on project size, should be used if full data is not available. This is the case, in this example and is a likely scenario for most Phase 4 projects.

  For Phase 5 and onwards, as the design is refined and construction planning becomes more detailed, more in-depth data on excavation and fuel use can be added to the Tool, and the specific activity types can be selected from the drop-down menu lists.


Benchmarking of Construction data: Note that a benchmarking exercise was undertaken on a number of features during the N22 project development (N22 Baile Bhuirne to Macroom), which can be reference for comparison purposes. It should be noted that each project is different, but comparisons are a useful way to appreciate the relative size of a feature's carbon footprint and identify areas for carbon savings or design improvement: RE-ENV-01109

Withdrawn

Operational Use

This stage captures the operational footprint of the infrastructure project. There are three sections to complete, as follows:

- Operational Energy Data: This includes annual energy use by different activities such as lighting or signs as part of the project such as energy, water, and waste. Where street lighting, stations, depots, or offices are included in the infrastructure development, this section is likely to be included within the scoping assessment.

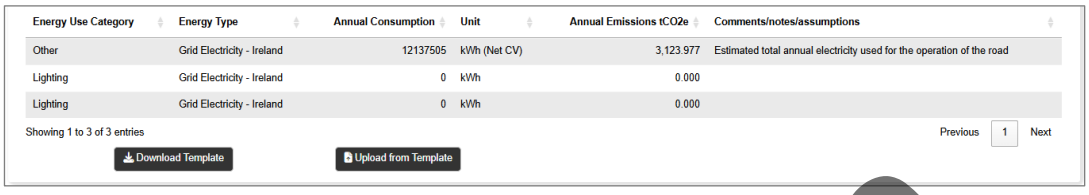

Energy Use Category	Energy Type	Annual Consumption	Unit	Annual Emissions tCO2e	Comments/notes/assumptions
Other	Grid Electricity - Ireland	12137505	kWh (Net CV)	3,123.977	Estimated total annual electricity used for the operation of the road
Lighting	Grid Electricity - Ireland	0	kWh	0.000	
Lighting	Grid Electricity - Ireland	0	kWh	0.000	

Showing 1 to 3 of 3 entries Previous 1 Next

Download Template Upload from Template

- Operational Water Data: This includes annual volume of water used during operation. It was excluded in this example as it was not relevant to the project; however, it may be included in the scope if public facilities at stations, depots or services areas are included in the project design.
- Operational Waste Data: This includes annual waste arising during operation. It was excluded in this example as it was not relevant to the project, however, may be included in the scope of projects if a high level of maintenance is anticipated, or a large level of refuse is likely to accumulate during operation.

The level of data entry for this stage per project phase is:

Phases 0 and 1: It is unlikely that data will be available; therefore, this can be left blank.


Phases 2 and 3: Some information may be gathered as part of the options assessment, which could be completed. In this case, use the extra pages provided for different options.

Phases 4, 5, 6 and 7: This data should be available in some form for Phase 4, especially that pertaining to vehicle use of the infrastructure. It will be refined as the Phases progress; therefore, the data should be updated for each Phase.

Road User Emissions

This stage captures the use of the infrastructure by the users, as follows:

- Emissions Associated with Vehicles Using the Infrastructure - this includes road vehicles or light rail vehicles. It will usually be included in the scope as it is likely to form a significant part of the operational emissions. In this example, emissions taken directly from REM outputs have been inserted.



REM Outputs: Do Minimum Scenario (tCO2e)	REM Outputs: Do Something Scenario (tCO2e)	Difference DS-DM Scenarios (tCO2e)	Comments/notes/assumptions
261799640.4	268169794.7	6370154.299999982	

Download Template Upload from Template

The level of data entry for this stage per project phase is:

- **Phases 0 and 1:** It is unlikely that data will be available; therefore, this can be left blank.

Withdrawn

- **Phases 2:** Some information may be gathered as part of the options assessment, which could be completed. In this case, use the extra pages provided for different options. These can be navigated to via the Road, Greenway, or Light Rail Homepage.
- **Phases 3, 4, 5, 6 and 7:** This data should be available in some form for Phase 4, especially that pertaining to vehicle use of the infrastructure. It will be refined as the Phases progress; therefore, the data should be updated for each Phase.

Maintenance

This stage captures the fuel used for the maintenance of the infrastructure project during its use as follows:

- Fuel for Maintenance: This includes fuel used in the maintenance plant. It was included in this example as a high level of maintenance is anticipated; however, it may be excluded in the scope of projects where maintenance is likely to be minimal.

Fuel Type	Annual Quantity	Unit	Annual Emissions tCO2e	Comments/notes/assumptions
Grid Electricity - Ireland	35000	kWh (Net CV)	9.008	Evening works
Gasoline (Petrol)	3200	Litre	9.396	Maintenance vehicles
Grid Electricity - Ireland	860	kWh (Net CV)	0.221	Daily works
Grid Electricity - Ireland	0	kWh	0.000	
Grid Electricity - Ireland	0	kWh	0.000	

The level of data entry for this stage per project phase is:

- **Phases 0 and 1:** It is unlikely that data will be available; therefore, this can be left blank.
- **Phases 2:** Some information may be gathered as part of the options assessment, which could be completed. In this case, use the extra pages provided for different options.
- **Phases 3, 4, 5, 6 and 7:** This data should be available in some form for Phase 4, especially that pertaining to vehicle use of the infrastructure. It will be refined as the Phases progress; therefore, the data should be updated for each Phase.

End of Life

This stage assesses the impact of decommissioning the project. As in this example, decommissioning can often be scoped out, as transport corridors are not always removed after they close. Decommissioning may be within the scope if there are many assets associated with the project, aside from just the transport corridors. There are two captions to complete, as follows:

- Deconstruction Activities: Includes energy use associated with dismantling of the infrastructure. Data on fuel use for plant and generators can be inputted.
- Decommissioning Waste: Includes waste arising as a result of deconstruction. Note the different options for waste data entry, as detailed in section 3.3.9.

The level of data entry for this stage per project phase is:

- **Phases 0 and 1:** It is unlikely that data will be available; therefore, this can be left blank.
- **Phases 2:** Some information may be gathered as part of the options assessment, which could be completed. In this case, use the extra pages provided for different options. These can be navigated to via the Road, Greenway, or Light Rail Homepage.


Withdrawn

- **Phases 3, 4, 5, 6 and 7:** This data may not be available for all projects as it is often scoped out of an assessment. If it is included, it should have been estimated for Phase 4. It will be refined as the project phases progress; therefore, the data should be updated for each project phase.

Example: Step 5: Dashboard Road Summary


The outputs for this example display one option only, as other options were assessed in earlier project phases. Where multiple options are assessed in the Tool, the graphs will be populated to display these, as in the outputs shown in the previous section.

Emissions Breakdown by Stage: In this project, materials and construction activities have the main impact during the construction stages, while customer use will have a large impact during the operational phase.

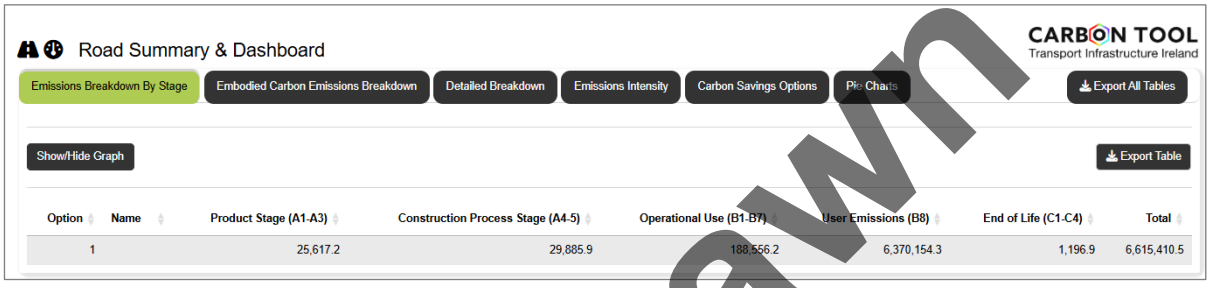


Detailed Emissions Breakdown: Detailed breakdowns are available in the form of a table and pie charts and presents emissions by activity under each stage. In the example below the 'Road User Emissions' category has been hidden in the pie chart. This is because emissions over the lifetime of the project will generally overshadow the other results being displayed, and it is these other categories that can be addressed as part of the project design. Any categories with emissions below 1% have also been hidden.

Option	Name	Product Stage (A1-A3)		Construction Process Stage (A4-A5)							Operational Use (B1-B7)					
		Raw Material Supply and Manufacture (A1, A3)	Raw Material Transport (A2)	Construction Worker Travel to Site (A4)	Clearance and demolition (A5)	Land Use Change and Vegetation Loss (A5)	Clearance and Demolition Water Use (A5)	Excavation (A5)	Plant Use (A5)	Construction Water Use (A5)	Construction Waste Disposal (A5)	Construction Waste Transport (A5)	Landscaping and Vegetation (A5)	Operational Waste Disposal (B1)	Operational Waste Transport (B1)	Mai
1		25,496.4	120.8	2.6	2.6	91.4	0.0	0.0	29,789.3	0.0	1,196.8	0.1	0.0	0.0	0.0	

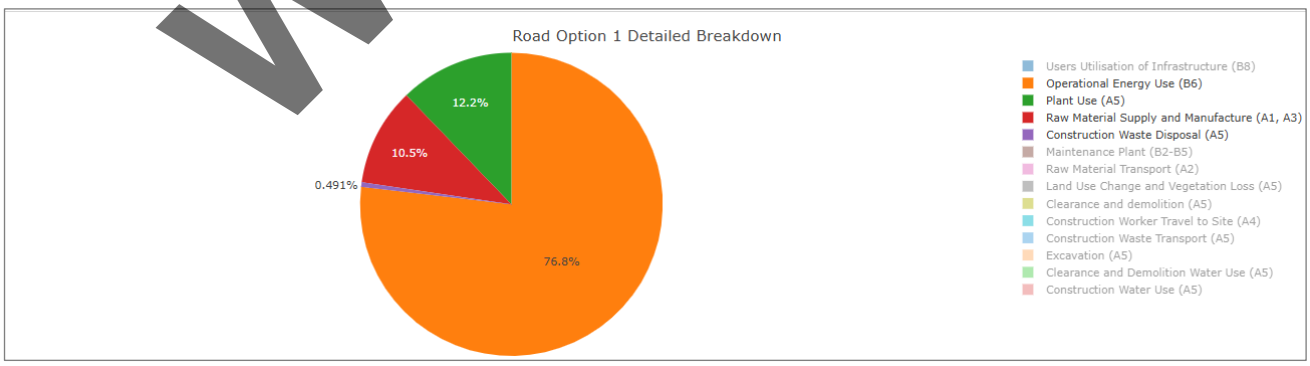

Withdrawn

Emissions Intensity Reporting: The outputs from the project can be represented by kilometre of road, and by project spend. This will allow project-by-project comparison and future benchmarking.

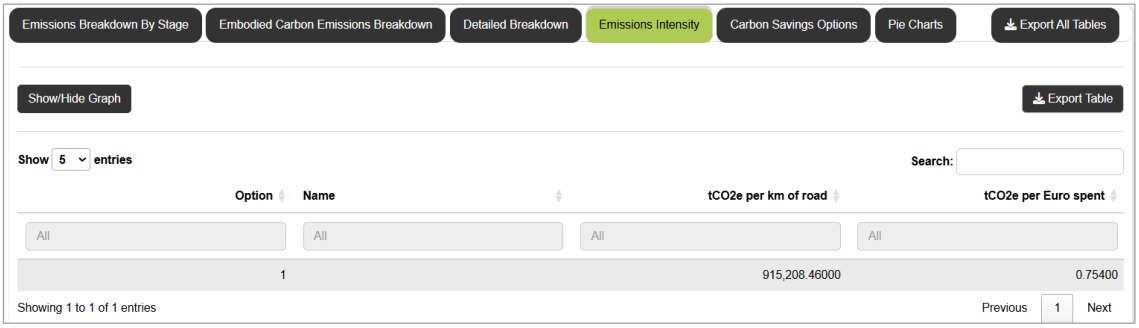

Withdrawn

Appendix A:

Emission Factors Used in the Carbon Tool

Withdrawn

Source	Description	Justification
Institution of Civil Engineers: ICE (2013), CESMM4 Carbon & Price Book 2013[9]	Construction materials Clearance and excavation activities	In the absence of Ireland specific factors, this is a comprehensive source of the embodied carbon of the most common construction materials in the UK. They are based on generic UK construction data provided to trade associations. These factors can be used until EPDs are developed. Note that since the release of ICE v4 (see below), these factors are only used in the tool where there was no equivalent ICE v4 factor available.
Inventory of Carbon and Energy: ICE v4. ICE DB Advanced V4.0 – December 2024[10]	Construction materials Clearance and excavation activities	In the absence of Ireland-specific factors, the Inventory of Carbon and Energy (ICE Database) V0.4 provides the latest version of the embodied carbon database for building materials. It provides UK, European and global based data as well as EPDs. These factors can be used until EPDs specific to materials used in the project are developed. At the time of writing, ICE Database V4.1 was in development, with updated emissions factors expected for bitumen, asphalt, and GGBS to reflect the latest industry data. The tool will be updated to reflect these new values following their publication.
Highways England Carbon Tool v2.4[11]	Street furniture Electrical equipment	In the absence of Ireland-specific factors, Highways England provides a source indicative carbon footprint value for typical street furniture in England.
Sustainable Energy Authority of Ireland (2023), Conversion Factors[12]	Electricity (Ireland Specific) Fuels (Ireland Specific)	The Sustainable Energy Authority of Ireland provides Ireland-specific emission and conversion factors for electricity and the most common fuels in Ireland, making these the most suitable factors for use in the Tool.
European Commission (2010), Guidelines for the calculation of land carbon stocks[13]	Land use change	In the absence of Ireland-specific factors, these values were selected from the most comprehensive list available for European land use change.
UK Government (2024), Greenhouse Gas Reporting Conversion Factors[14]	Passenger Vehicles (except light rail) Freight vehicles (HGV only)	In the absence of Ireland-specific factors for vehicles and material disposal, these factors were selected as the standard used for reporting in the UK. Factors for water were derived from Water UK. Passenger Vehicle factors were calculated based on data from the UK Department for Transport and the Society for Motor Manufacturers and Traders. HGV factors were developed using UK Department for Transport data. Material disposal factors are based on figures from Ecoinvent data and England's Environment Agency's WRATE tool.

Withdrawn

[9] ICE CESMM4 Carbon & Price Book 2013: http://www.icevirtuallibrary.com/isbn/9780727758125
[10] ICE, 2024. Embodied Carbon – The ICE Database: https://circularecology.com/embodied-carbon-footprint-database.html
[11] Highways England Carbon Tool: https://nationalhighways.co.uk/suppliers/design-standards-and-specifications/carbon-emissions-calculation-tool
[12] Sustainable Energy Authority of Ireland (2023), Conversion Factors: https://www.seai.ie/resources/seai-statistics/conversion-factors/
[13] European Commission (2010), Guidelines for the calculation of land carbon stocks: https://eur-lex.europa.eu/LexUriServ/LexUriServ.do?uri=OJ:L:2010:151:0019:0041:EN:PDF
[14] UK Government 2024, Greenhouse Gas Conversion Factors: https://assets.publishing.service.gov.uk/media/6722567487df31a87d8c497e/ghg-conversion-factors-2024-full_set__for_advanced_users__v1_1.xlsx

Source	Description	Justification
	Water Supply Material disposal (reuse, recycling, landfill)	Further information on sources listed can be found in the Methodology Paper for Emission Factors[15]. Waste factors denoted as '(excl. transport)' within the tool have been manipulated to remove the generic transport figure, to allow the tool user to enter project specific transport data. The calculation applied[16] is based on the methodology described in the Methodology Paper for Emission Factors[17].

Withdrawn

[15] UK Government 2024, Methodology Paper for Emission Factors: https://assets.publishing.service.gov.uk/media/66a9fe4ca3c2a28abb50da4a/2024-greenhouse-gas-conversion-factors-methodology.pdf
[16] The calculation for waste transport, per kg of waste, to allow it to be subtracted from the factor is 1.25 kgCO2e per tonne of waste, derived by: total journey distance of 20km * (2024 UK Government Emission Factor for 'Delivery vehicles', Rigid (>7.5 tonnes-17 tonnes), 50% laden + WTT) / the assumed weight transported per average HGV of 12.25 tonnes.
[17] UK Government 2024, Methodology Paper for Emission Factors: https://assets.publishing.service.gov.uk/media/66a9fe4ca3c2a28abb50da4a/2024-greenhouse-gas-conversion-factors-methodology.pdf

Withdrawn

Withdrawn

Bonneagar Iompair Éireann
Transport Infrastructure Ireland

Ionad Ghnó Gheata na Páirce,
Stráid Gheata na Páirce,
Baile Átha Cliath 8, D08 DK10, Éire

Parkgate Business Centre,
Parkgate Street,
Dublin 8, D08 DK10, Ireland

www.tii.ie

info@tii.ie

+353 (01) 646 3600

+353 (01) 646 3601